

INSTRUCTION AND MAINTENANCE MANUAL INDUSTRIAL VACUUMS SERIES ECOBULL



This manual is an integral part of the vacuum.

Carefully read this manual and its attachments. Knowing the instructions contained in it is crucial for using the vacuum and carrying out maintenance operations under full safety conditions.

rev. 0 dated 15-11-2016


C.F. e P.I. 02258610357 Registro Imprese di Torino R.E.A. TO - 1149668 Capitale Sociale: € 25.000 i.v.





Tel. +39 011 98.59.117 Fax +39 011 98.59.326

Summary

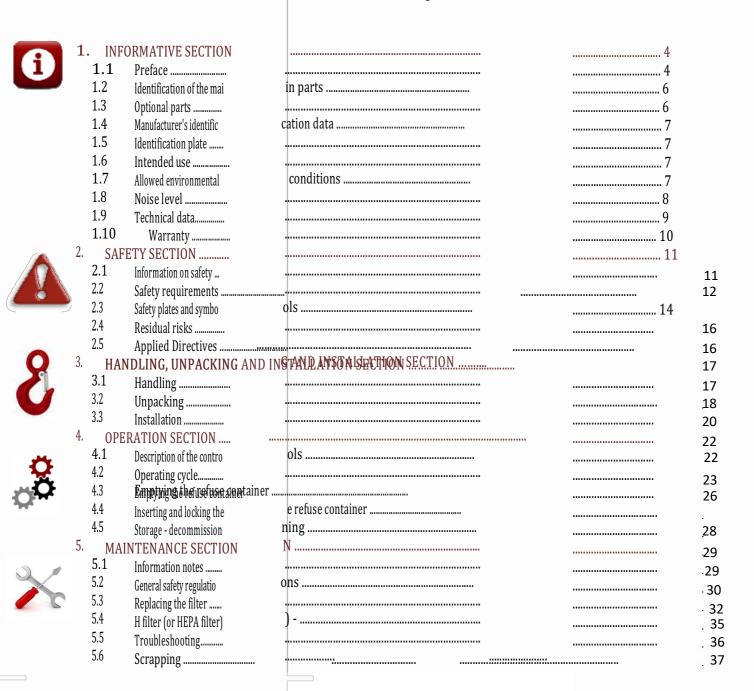

IMPORTANT - The DEPURECO na ame and logo used in this document refer to and a **DEPURECO INDUSTRIAL VACUUM MS S.r.l.**

This document is the exclusive property of DEPURECO S.r.l. Therefore it may no partially or totally by any means (graphic, computer, etc.), without the Company's aut

are property of

ot be reproduced either thorisation.

Depureco Industrial Vacuums Srl Società soggetta a direzione e coordinamento COFISE spa

C.F. e P.I. 02258610357 Registro Imprese di Torino R.E.A. TO - 1149668 Capitale Sociale: € 25.000 i.v.



1. INFORMATIVE SECTION

Preface 1.1

Dear Customer

We thank you for having chosen n DEPURECO and congratulations for choos sing an EcoBull series DEPURECO vacuum.

We have prepared this manual to all We recommend reading it carefully b It includes information, recommenda

low you to fully appreciate the qualities of this ma achine. before using it for the first time.

ations and important warnings concerning the us se of the vacuum, which

will help fully exploiting the technical

We recommend reading carefully

I properties of your machine. the messages, warnings and indications prec

ceded by the following



for personal safety;



for vacuum integrity v:



for environmental pro otection.

This document has been designed fo or extracting dust and processing residues.

The vacuumed material tends to s immediately at the entrance to the f deposited on the surface of the filter This manual describes the following

settle at the bottom of the container as a result filter chamber; finer dust particles are transported r placed above the container.

t of the deflector placed d by the air flow and are

models:

EcoBULL

The vacuum can be equipped with the following filters:

This manual provides all the necess sary information for the use and maintenance of yo our vacuum.

This specific model has undergone e strict testing to ensure maximum reliability. Its operation and durability will depend on proper use and maint tenance.

S.r.I. (hereafter simply called DEPU URECO).

This manual is integral part of the va acuum and must accompany it at all times, until its In the event it is lost or damaged, yo ou can request another copy from DEPURECO IN

s demolition. NDUSTRIAL VACUUMS



The technical information containe ed in this manual is exclusive property of DEP PURECO and must be considered confidential.

Reproduction, even partial, of graph hics, text and illustrations is prohibited by law.

Some details shown in the figures in n this manual can differ from those on your vacuu um; this is because some components can be removed to ens sure maximum clarity.

For easier consultation, this manual is divided into sections that are identified by a space pecific graphic symbol. The topics covered in this manual a technical data are taken from the technical file archived at DEPURECO.

In compliance with Regulation 190 07/2006/EC (REACH), DEPURECO declares th contain any Substances of Very High h Concern (SVHC) included in the Candidate List t.


This manual must be kept in a place e that can be easily accessed by the personnel i in charge of running and maintaining the vacuum.

Any dispute will be heard by the Cou urt of Turin (Italy).



This manual must ac ccompany the vacuum even in the event it is s sold!

1.2 Identification of the main parts

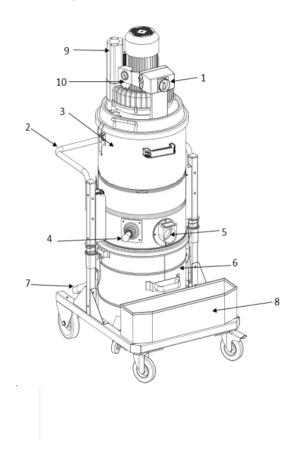

- 1. on/off commands
- 2. grip for handling
- 3. filter chamber
- 4. filter shaking lever
- 5. suction nozzle
- 6. collection container for vac cuumed material
- 7. container release lever
- 8. accessory holder
- 9. blower
- 10. negative pressure indicator

1.3 Optional parts

DEPURECO provides a wide range of optional accessories, according to the applicat tion of the vacuum.



1.4 Manufacturer's identification data

DEPURECO INDUSTRIAL VACUUM MS S.r.I.

C.so Europa 609 - 10088 VOLPIAN NO (TO) - ITALY

Tel. +39 011 98 59 117 Fax +39 011 98 59 326

e-mail: depureco@depureco.com website: www.depureco.com VAT No. 02258610357

1.5 Identification plate

The data on the vacuum identificatio on plate must be referred to in any communication n with the manufacturer or the dealer.

1.6

Intended use

This model has been designed, ma anufactured and protected solely for professiona al industrial extraction of non-flammable and non-toxic wet an nd/or dry dust and shavings.

Any other use is considered **IMPRO OPER**.

1.7 Allowed environmental conditions

To ensure proper operation, the va acuum must be protected from weather agents suspended powders, etc.) at a room m temperature ranging between 5 and 45 °C and a The work environment must be clean n, suitably lit and must not give rise to potentially

s (Rain, hail, snow, fog, a humidity below 70%. explosive atmosphere.



1.8 Noise level

Photometric tests carried out on thes se specific models have shown a sound pressure e level of

ECOBULL

72 dB(A)



Attention!

For sound pressuree levels above 85 dB(A), exposed workers mus st wear suitable personal protectivee equipment (PPE), such as type-approved ind protection.



Under these condi itions, workers must be provided with adequa ate training and information on ris ks arising from noise exposure.

1.9 Technical data

		1ph	3PH
POWER	KW	2,2	3
TENSION	V-HZ	230 -	50/60
DEPRESSION	mBar	230	310
MAX AIR FLOW	mc/h	350	420
INLET	mm	70	70
FILTER SURFACE	cmq	24.	000
NOISE LEVEL	dB(A)	7	2
BIN	Lt	65/	100
WEIGHT	Kg	90	95
DIMENSIONS	cm	66x80	0x153

aging weight = 18 Kg



1.10 Warranty

DEPURECO guarantees this mode el for 12 months from the date of purchase indica ated in the receipt upon delivery of the product.

The warranty is null and void in the event that the vacuum is repaired by una equipment, accessories or compone ents not supplied or not authorised by DEPUREC CO are used or the serial number is removed (during the warra anty period).

During the warranty period, DEP PURECO undertakes to repair or replace free e of charge parts and components, which prove to have m manufacturing defects.

Repairs are made solely at our pre emises or in specific Service centres and must to be delivered ex works (transport costs are charged to the pourchaser, unless otherwise agreed upon).

The warranty does not cover cleanin ng of operating elements.

The purchase receipt must be show wn to the authorised technical personnel carrying g out the repair and must

accompany the vacuum during its sh hipment.

Defects that are not evidently due to o materials or manufacturing will be examined sol lely at our premises or at

Defects that are not evidently due to o materials or manufacturing will be examined sol lely at our premises or at a specific Technical Service Centre.

Should the complaint be unjustifie ed, all repair and/or replacement expenses sh hall be charged to the purchaser.

The following are excluded from thus, improper use, non-compliance with the instructions contained in this booklet or that do not depend on normal use/op that do not depend o

DEPURECO shall not be held liable e for any injuries to persons or damage to objec cts caused by misuse or improper use of the vacuum.

Any dispute will be heard by the Cou urt of Turin (Italy).



Protect your purchases by joining the exclusive "warranty plus" program www.depureco.com, fill



2. SAFETY SECTION

2.1 Information on safety



In compliance with Italian Legislative Decree 81/08 and sub amendments, thee Safety Manager is obliged to educate, inform a risks related to thee use of the vacuum, in order for them to be able others' safety.

bsequent additions and and train workers on the e to protect their own and

Failure to comply with basic safety s and repairs of the vacuum. Accid situations before they occur. Adequa

standards and precautions can cause accidents d dents can frequently be avoided by recognising ate training is crucial to this end.

during use, maintenance g potentially hazardous

DEPURECO shall not be held liabl untrained personnel or to failure t intervention procedures contained in

le for accidents or damage due to the improper to comply, even partially, with the occupationa n this manual.

r use of the vacuum by al safety standards and

consequences for themselves and o

Safety warnings and precautions are e indicated in this manual as well as on the produ Operators must pay special atte ention to these hazard warnings to prevent other people.

uct itself. accidents with serious

Safety messages are emphasised b by the following symbol:



Attention!

Failure to comply wi ith these messages can cause injuries to the o

operator.



Attention!

Failure to comply wi ith these messages can cause damage to the v vacuum.



Attention!

Failure to comply wit th these messages can cause damage to the e

environment.

DEPURECO designs and manuf compensating possible risks related techniques not expressly provided fo are no dangers for oneself and the o

factures its equipment and accessories with d to their use. In the event that equipment, proce or by DEPURECO are used, it is crucial to ensur others, notwithstanding that DEPURECO shall no

h care, identifying and edures, work methods or re beforehand that there ot be held liable.



Use only original DEPURECO replacement parts

Depureco declines all responsibility for the use of non-original spare parts.



2.2 Safety requirements



Attention!

The indications belo ow are important to prevent hazards that can the vacuum. Howevver, they cannot replace the expertise and c operators as an ove erall framework for accident prevention.

n occur while operating common sense of the

Every section lists f further safety requirements specific for the various operatioons.

CAUTION!

This vacuum can only be used by y adequately trained adults.

This vacuum is suitable for indus strial use, such as: factories, warehouses, worksh hops.

• The equipment must be electrica ally connected to a mains equipped with efficient e earthing.

• This vacuum is not intended to be e used in corrosive or explosive environments.

Keep the vacuum clear from fore eign bodies, such as debris, oil, tools and other ob bjects that could damage
its operation and cause injuries.

 Avoid using flammable or toxic c solvents, such as petrol, benzene, ether an nd alcohol for cleaning operations.

Avoid prolonged contact with solv vents and inhaling their vapours.

Avoid using it in the proximity of n naked flames or heat sources; ensure suitable ve entilation.

Do not, under any circumstance, use the vacuum without a filter.

Do not vacuum lit cigarette butts: : they could ignite the filter.

Do not vacuum petrol or flammab ble liquids in general.

Ensure that all the guards and pr rotection devices are in place and that all the saf fety devices are properly
installed and efficient.

• Do not wear loose or baggy cloth hing, such as ties, scarves, ripped clothes that co ould get easily caught or trapped in the vacuum.

• Do not open the refuse collection n container while the vacuum is operating.

Never put your hands inside the container's positioning guides: movement of the lifting handle can cause crushing of the fingers.

Extensions, press-fit plugs and a adapters are prohibited.

· Do not climb on the vacuum.

Do not touch electric wires, switc ches, buttons, etc., with wet hands.

Periodically verify the integrity of the power cord.

• When using the industrial vacuum m, some components (motor terminal box, moto or body in particular) can reach high temperatures.



• During the operations to restore of the procedure, normal operati devices and protective guards inv

original work conditions, the personnel in charge ing and safety conditions of the vacuum and, in volved in the operation.

e must ensure at the end n particular, of the safety

In the event that the Customer in nstalls a tool not supplied by DEPURECO on the v verify that the safety requireme ents of Machinery Directive 2006/42/CE are m DEPURECO shall not be held lia able for problems caused by the use of that part.

vacuum, it is essential to met, notwithstanding that

Structural damage, alterations o or improper repairs can modify the protective c thereby nullifying this certification n and releasing DEPURECO from any liability.

capacity of the vacuum,

doubts.

This manual must always be ke ept at hand for consultation on the operating cyc

cle and for clarifying any

In the event it is lost or damaged d, request another copy from DEPURECO.

Attention!



This vacuum can co ontain harmful dust. Emptying and main ntenance procedures, including the disposal containers, must bbe carried out only by specialised person personal protective equipment.

of the dust collection nnel wearing suitable

Do not activate with hout a complete filtering system.



2.3 Safety plates and symbols

Plates with safety symbols and mess sages are applied to the vacuum and its packagin ng These pages show their precise loca ation and the nature of the hazard.




Attention!

Ensure that all safetyy messages are perfectly legible.

Clean them with a cl. loth, water and soap. Do not use solvents, nap phtha or petrol.

Replace damaged pl. lates requesting them from DEPURECO.

In the event that a pl. late is located on a piece that is replaced, ens a new plate is affixed d to the new piece.

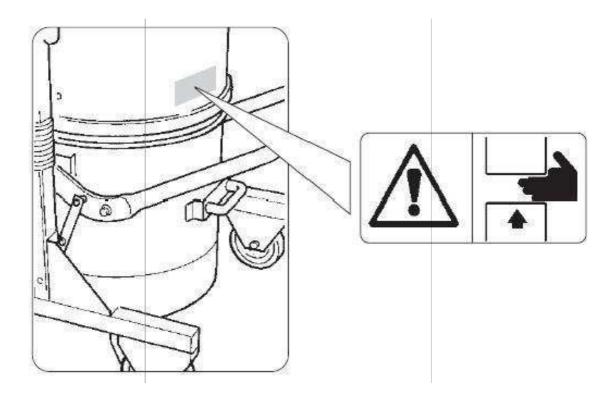



Attention!

Upper limb crushinng hazard while inserting and locking the refu under the vacuum.

Never place your h hands between the vacuum and the refuse con and locking the refuse container in place under the vacuum.

Lock the container in place by means of the dedicated lever, usin

use container in place

ntainer while inserting

ng <u>BOTH HANDS</u>.



If you have any doubt do not act by yourself!

Please call your retailer








Attention!

Carefully read this use and maintenance manual before e using the vacuum or carrying out maintenance interventions.

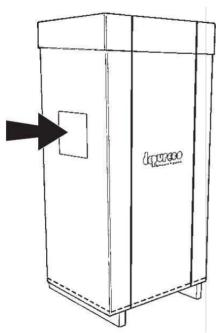



Attention!

Carefully read the e instructions on the packaging before h handling and unpacking the vacuum.



2.4 Residual risks

DEPURECO recommends complyin and with the safety standards in fo equipment as well as the protection

ng with the instructions, procedures and recomme orce. DEPURECO also recommends using suita devices integrated in the vacuum.

endations in this manual able personal protective

d to operate on live parts,

The residual risks analysed on the v

vacuum and/or its components can be:

Electrical risks during maintenanc

Pursuant to Italian Legislative Decre notwithstanding the exceptions set fo

ce on live parts ee 81/08 - articles from 80 to 87 - it is prohibited orth by said Legislative Decree.

of liquid, explosive and flammable substance

Risk of improper use in presence nvironments containing liquid substances or liquid The vacuum must not be used in en ds that can evaporate at room temperature, flammable powde ers and gas.

Risks related to operation in humi

Comply with the limitations indicated

id environments d in this manual, in คุณช่วงกา 1.7 "Aักปละสุดควางกาศตาเลl conditions".

Risk of crushing the upper limbs.

A safety pictogram on the vacuum w warns about this hazard.

Risks of misinterpretation of safet ty pictograms

With reference to risk analysis and i compliance with the standard conce

identification, DEPURECO has installed hazard I erning graphic symbols.

labels on the vacuum, in

The user must immediately replace a any safety plate made illegible due to wear or dam mage.

Attention!



It is strictly prohibbited to remove the safety plates from th components and pa ackaging.

DEPURECO shall n not be held liable for the vacuum's safety in comply with this pro ohibition.

he vacuum and/or its

the event of failure to

2.5 **Applied Directives**

The following Directives apply to the e vacuum described in this manual:

2006/42/EC Machinery Directive

2014/30/EU Electromagnetic Compatibility Directive

Reference standards, including their r binding requirements, are managed through the e DEPURECO Quality and Environmental Management Sy vstem.



3. HANDLING, UNPACKING AND INSTALLATION SECTION

3.1 Handling




Attention!

The instructions for transporting and unpacking the vacuum correctly are shown also on the packaging.

The instructions below also include the operations to be carried out in the event that the vacuum must be packed or unpacked again for subsequent transport.

Dimensions of the packed vacuum:

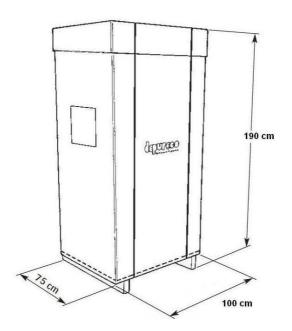



The vacuum must be lifted and handled only using a forklift whose load bearing capacity is suited to the weight.

When using a forklift, lift the load 200 mm off the ground and swing backwards.


Always keep the height of the working environment in mind when lifting loads.

Before starting any movement, ensure that the area is cleared and that there are no moving objects on the packaging. For lifting and handling operations, comply with the occupational safety standards in force and with the normal forklist driving instructions.




3.2 Unpacking


- Cut and remove the two pack aging fasteners,

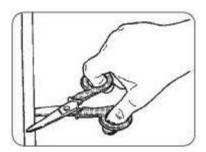

- with a screwdriver remove the e staples that secure the carton to the pallet

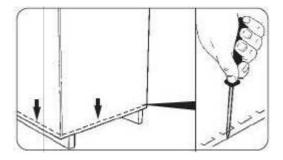


remove the carton

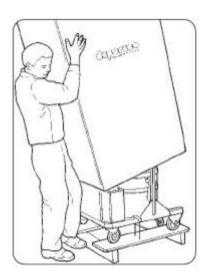



- loosen and remove the fasten ning screws and brackets from both sides

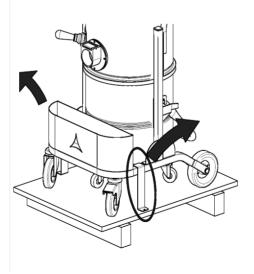





The ω ardboard packaging is recyclable and should be collected separately to prevent environmental impact.



Attention!

Keep the pallet and the fastening brackets.

In the event of subs sequent transport, the vacuum must be secure ed to the pallet using the same fasteening system.



3.3 Installation



Warning!

Before installing the e vacuum, it is important to carry out a thoroug preventive visual ins spection to identify any damage occurred duri transport.


ing

gh


In the event that one or more co omponents are damaged, do not continue with h installation and inform DEPURECO about the anomaly and d agree upon the actions to be taken.

The vacuum is already equipped wit tha suction filter, which allows extracting only dry y dust or debris.

- Insert the hose equipped with h a terminal in the suction nozzle

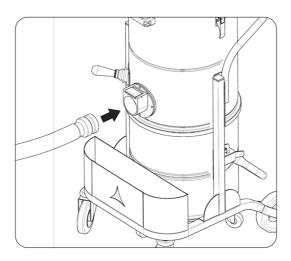

- insert the accessory according g to the type of extraction on the opposite side of the hose

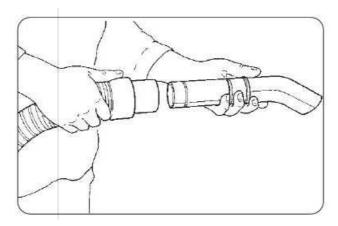


Note: the hose with its terminals and d the suction accessories are not included as ST dealer (or DEPURECO) for informa ation regarding the various types of OPTIONAL t specific model.

TANDARD. Contact your that can be used on this



The following operation must be c carried out by a qualified electrician.

Ensure that the power supply line c corresponds to the voltage and frequency indica ated on the identification plate and that it is efficiently earthed d.

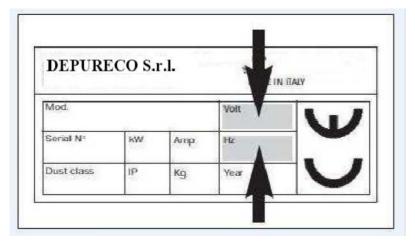

The socket to power the vacuum m must be protected by a mains disconnect switch h in compliance with EU standards.

Insert the plug (standard supply) into o the socket.



Attention! Do not insert the plu ug into the socket with wet hands.

The use of extensionns is not allowed.



4. OPERATION SECTION

4.1 Description of the comtrols




Attention!

The vacuum can be e used solely by authorised personnel after h and maintenance ins structions.

The user of the equi ipment and the maintenance technician, who c on the vacuum, mus st be adequately educated, informed and train the occupational safety standards in force and, during the var wear personal prote ective equipment (PPE), such as safety footw goggles, mask, etc c. The user must comply with the provision ns in force concerning extracted materials and their disposal.

having read these use

carry out interventions ned, in compliance with rious operations, must wear, gloves, protective

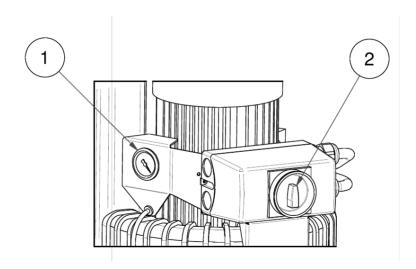

- 1. Vacuum gauge: indicates su uction filter clogging
- 2. ON-OFF master switch



4.2 Operating cycle

Ensure that the power cord is intact and in perfect state.



Attention!


Before inserting the e plug, ensure that the voltage of the power su upply line corresponds to that t indicated on the vacuum's identification plate e.

Ensure that the power plug is inserte ed correctly into the socket.

Ensure that the hose is inserted prop perly and locked into the suction inlet.

Ensure that the refuse collection con ntainer is properly locked to the vacuum.

Block the vacuum using the lever on n the swivel caster, as shown in the figure.

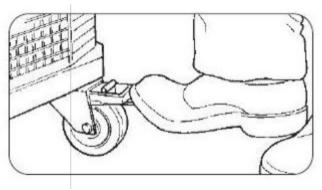



Attention!

Do not shift the vacuuum while it is operating.


Hold the end of the hose with the ch hosen accessory.

Turn the main switch (2) to "I" and s start vacuuming.

To turn off the vacuum position the s switch to "0".


Check that the rotation direction is a as indicated by the arrow in the figure.



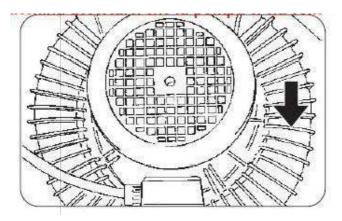

If motor rotation direction is not corre ect, insert a screwdriver into the notch within the p power plu the two poles with a rotation of 180°°.

power plug and reverse

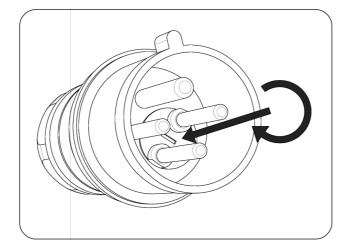

Warning!



Before turning the va acuum on again, ensure that the pump has fu ully stopped.



To move the vacuum use the specia al grip on the rear part.



Warning! During operation, pr revent the hose from rolling up or bending.

The vacuum gauge indicates the co with consequent reduction of the suc

The EcoBull models feature a vacu uum gauge indicating the level of negative press ondition of the filter: negative pressure increases ction power.

sure inside the vacuum. s indicate filter clogging,

When the filter is clogged, the vacuu um meter indicates the value shown in the table b

below.


Model	Clogged filter value	
EcoBull	- 0.16 bar	- 16 kPa
EcoBull		
22/22 (*)	- 0.18 bar	- 18 kPa

(*) valid values for all models with op ptional HEPA filter.

In the event that the red indicator r light turns on or the negative pressure is hig

in the table, check firstly that th he hose and/or the suction accessory is not remove the cause of the clog. Oth herwise it will be necessary to clean the filter a gher than that reported clogged. In this case, as described below:

- turn off the machine
- wait for the rotating motors to come to a complete stop
- lift and then lower the lever en nergetically to shake the internal filter.

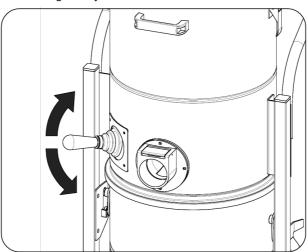





Warning!

Do not, under any ci ircumstance, use the machine with a clogged filter.



Attention!

If the vacuum is no ot working properly after having cleaned the filter, it can mean that the

filter is clogged and d needs to be replaced.

4.3 Emptying the refuse container




Attention!
Wear PPE (gloves, d dust mask, goggles, etc.) during this operation n

According to the amount and type of f extracted material, it is important to periodically verify the refuse container, preventing it from filling up p excessively.


To empty the container:

- turn off the machine
- as previously mentioned, the e vacuum is locked by the lever located on the sw wivel caster
- · unlock the container by liftin ng the lever

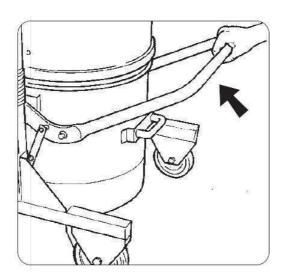

· remove the container from th he vacuum, using the handle



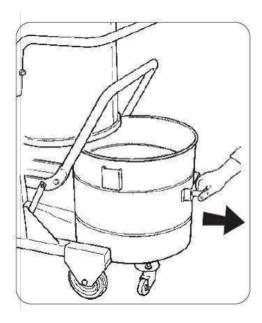

empty the vacuum container r in the dedicated container and dispose of it standards in force in the coun ntry of use

in compliance with the



Attention!

In the event that the e container weighs over 15 Kg, have somebody y help you.



Attention!

Waste must be disposed of in compliance with the st country of use – for Italy with Legislative Decree 152 amendments and additions.


tandards in force in the 2/2006 and subsequent

In the ewent of use with class M and H dusts, these m must be conveyed to a special plastic bag.



4.4 Inserting and locking the refuse container

- Place the container under the e vacuum, holding the lever raised, until it stops ag gainst the stop

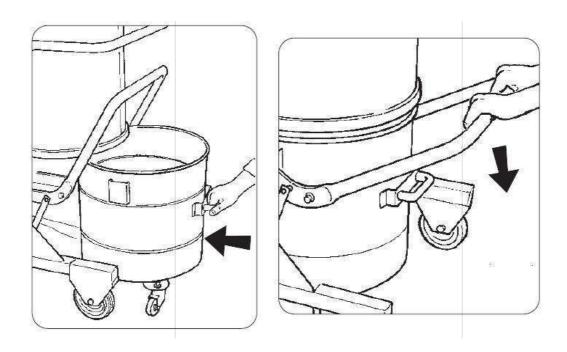

- fully lower the lever that locks s the container using both hands.



Attention! Upper limb crushingg hazard!

Do not, under any circumstance, place your hands between t the container and the vacuum while lockin ng it.

4.5 Storage - decommissioning

Remove the filter and clean it; empty y the refuse collection container and store the vac cuum in a place protected against weather agents with the temperature ranging between 5 and 45 °C and cover it with a nylon tarp to protect it against dust.

×	Non è possibile visualizzare l'immagine colle	llegata. Il file potrebbe essere stato spostato,	inominato o eliminato. Verificare che il collega	mento punti al file e al percorso corretti.			
	IN both possibility finalizars Framagine cologista if the potrobbe exerce state spossate, finalizars exhibitions of similars. Nerficare che il considerato controlato exercisars controlato al fine e al parcorso corretti.						

potrebbe essere stato spostato, rinominato o eliminato. Verificare che il eollegamento punti al file e al percorso corretti.

5. MAINTENANCE SECTION

Attention!



Special vacuum maintenance must be carried out solely by specialised technicians authorised by the DEPURECO dealer.

5.1 Information notes

This section describes the verifications and routine maintenance operations required to ensure proper vacuum operation.

Maximum reliability and minimum maintenance costs are the result of a planned maintenance and inspection schedule carefully followed throughout the entire lifespan of the vacuum.

Observe the set maintenance intervals and schedule the interventions according to specific requirements in relation with the vacuum production cycle.

Always use tools that are in perfect state and that are specifically intended for the operation to be carried out; the use of inadequate or inefficient tools can cause serious damage.

Any other intervention required to eliminate faults or malfunctions must be expressly authorised by the manufacturer.

In these cases, always communicate the vacuum identification data - see para. 1.4 of this manual.

For important repairs, refer to the authorised dealer, whose specialised personnel has the technological expertise and is always available for prompt interventions.

As for interventions carried out by the user, the vacuum must be disassembled, cleaned and maintained, where possible, in such a way as to prevent hazards to the maintenance personnel and to third parties. Suitable precautions include decontamination prior to disassembly, forced filtered ventilation of the room where the equipment is disassembled, cleaning the maintenance area and wearing suitable personal protective equipment.

Once every three months __ (or more frequently, according to the operating cycle and the conditions of use), the manufacturer or a qualified technician must check the filters, ensuring that they are not damaged and must check the proper operation of the control devices.

Should maintenance operations or repairs be carried out, all contaminated objects must be adequately cleaned, placed in waterproof bags and disposed of in compliance with the standards in force.

Non è possibile visualizzare l'immagine collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verifican che il collegamento punti al file delle proposo corretti

5.2 General safety regulations

Attention!

Non è possibile visualizzare Firmagine collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretti. All the operations de escribed above must be carried out with the p the socket (and the a air disconnected from the CCA system).

plug disconnected from

Before starting any maintenance or cleaning operation, wear su clothing, goggles an nd/or gloves, etc.) according to the work to be

uitable PPE (protective done.

Non è possibile visualizzare l'immagine collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretti.

Place a sign on the v vacuum with the message:

"MACHINE UNDER MMAINTENANCE DO NOT START"

Before resuming ope eration, verify the entire system according to Run a few trial ope erating cycles after every maintenance opera machine operation.

start-up procedures. ation to ensure proper

Failure to comply wi ith these precautions can cause series injuries

s to the personnel.

Maintenance operations must be car rried out by trained technicians specialised in the e following sectors:

- · Mechanical maintenance
- · Electrical maintenance

It is the Safety Manager's duty to en nsure the professionalism and skills of these techn nicians.

Before starting any maintenance o operation, the Safety Manager must:

- Keep unauthorised personnel out o of the work area.

| Stock - possible visualizarus rimmagine citiligata in file porthode serves state opostuti, rimmativa o diministri. Verificuse che il colegamento punti al file e di parcicio ci cirricali.

- Ensur re that the necessary tools are in good conditions the maintenance technician.
- Ensur re that the maintenance technician is equip protective equipment required for the specific oper shoes, mask, etc.).
- Ensur re that the maintenance technician has careful contained in this manual and knows the operation components perfectly well.

s and readily available to

ped with the personal ration (gloves, goggles,

lly read the instructions of the vacuum and its

- Ensure that there is enough light an nd, if necessary, provide 24 Volt torches.

Before starting any maintenance o operation, the Maintenance technician must:

- disconnect all power supplies and s safely lock the vacuum and
- disconnect the compressed air sup pply (where available).



Attention!

If working with the power on is absolutely necessary, when pr Decree 81/08, the mmaintenance technician must remain at a saf buttons at hand and d must never place his hands into the discharg rovided by Legislative fe distance, have stop ge volume.

efficiency of the safety devices and t Interventions on the motors or on trained electrical maintenance techn nician authorised by the Safety Manager.

Upon completing the intervention an nd before starting up again, the maintenance te the integrity of the protective guards. other electrical components must only be carri

echnician must verify the ied out by the specially



Attention!

After every maintenaance operation, the Safety Manager is oblige conditions of the vac cuum and its protection devices.

ed to ensure the safety

Before every work shift

ug are not damaged: replace immediately if it sho - Check that the power cord and plu on c/o DEPURECO) - this operation requires the s a cable of the same type (informatio

ows signs of wear, using skills of an electrician.

- Ensure the integrity of the safety sy

ymbols (pictograms) applied to the vacuum.

- Ensure that the refuse collection co

ontainer is empty and properly locked under the v vacuum.

- Ensure the correct performance of

the filter by checking the indicator or the vacuum m gauge.

- Ensure the integrity of the suction h

hose and of the accessories to be used.



Attention!

A perforated hose reduces suction power and dispe erses dust in the air.

Non è possibile visualizzare l'immagine collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretti.

5.3 Replacing the filter





Attention!

Wear appropriate PPPE (dust mask, latex gloves, goggles, etc.).


To replace the filter, proceed as fol Ilows:

- turn off the machine
- disconnect the vacuum from e electric power supply
- remove the container as desc cribed at point 4.3
- from the bottom of the filter c chamber, release the clip and remove the cage filter securing pin to the filter shaker lever

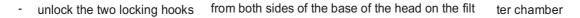

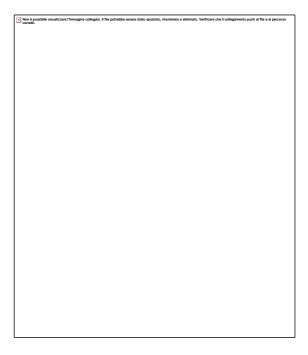

- remove the head with its base e
- remove the HEPA filter, follow wing the procedure mentioned above.
- remove the filter and place ev verything on a worktop

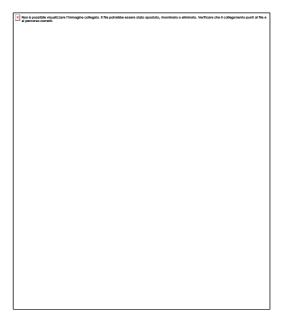



- remove the fastening clamp (H); detach the filter from its support and use a pair of scissors to cut the lower wires that lock it to the shaker cage.



-remove the filter, place it inside a plastic bag, close it and **dispose of it in compliance with the laws in force**, according to the extracted material.

To assemble the new filter, proceed in reverse order:

- insert the filter into its support ring, locking it by means of the fastening clamp (H)
- lock the filter to the cage tying the wires on its lower side.
- insert the filter complete with ring and cage into the vacuum, paying attention to the alignment of the cage with the filter shaker lever
- insert the end of the lever into place inside the cage, insert the pin and fastening clip
- insert and lock the container into position
- place the head on the filter chamber (possibly after adding the band with the HEPA filter)
- lock the two fastening latches (C)
- connect the power supply
- turn the vacuum on, checking its operation.

USE ONLY GENUINE DEPURECO FILTERS

×	Non è possibile visualizzare l'immagine collegata. Il file potrebbe essere stato spostato,
	rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretti.

5.4 H filter (or HEPA filter) -

The HEPA filter is capable of retaining almost 100% of vacuumed dust. The vacuum equipped with this type of filter must be periodically verified relative to the filtering ability.

Attention!

To replace the HEPA filter wear appropriate PPE (dust mask, protective goggles, latex gloves, etc.).

- To replace the HEPA filter, remove the head, the containment band of the H filter and flip it. Unscrew the fastening screw of the filter (A).



collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretti.

-Remove the filter, place it inside a plastic bag, close it and dispose of it in compliance with the laws in force, according to the extracted material.



- Install the new filter and lock all with the (A) previously removed screw.

USE ONLY GENUINE DEPURECO FILTERS
HEPA type

Non è possibile visualizzare l'immagine collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretto.

5.5 Troubleshooting

ANOMALY DETECTED	POSSIBLE CAUSE	SUGGESTED SOLUTION
The vacuum does not start up	- No power supply	Check that there is voltage in the socket Check the electric plug and power cord
	- Circuit breaker tripped (TB)	- Reset the circuit breaker (TB) - Contact the DEPURECO technical service centre
The vacuum gauge indicates an irregular	- Clogged filter	Shake the filter. Should this not be enough, replace it.
negative pressure	- Clogged suction hose	Check the suction hose and clean it.
Motor excessively noisy	- Faulty pump	- Contact the DEPURECO technical service centre

Non è possibile visualizzare l'immagine collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretto.

5.6 Scrapping



Non à cossibile visualizzare l'immagine collegat. Il file potrobbe essere stato verificare che il collegamento punti al file e al percorso corretti. To prevent damaging the environment in the even components of the vacuum must be disposed of landfills and in compliance with the standards in forc Decree 152/2006 and subsequent amendments and Before scrapping the machine, the plastic and rubber separated from the electrical material.

nt of scrapping, all the f responsibly in suitable ce - for Italy, Legislative additions.

r materials must be



In the possible visualizare
 Firmingine collegat. If file porteible
 essere stato spostato, rinominato o
 eliminato. Venificar che il
 control del porteible
 control del porteible

Correct disposal of this product (electrical and ele Electric and electronic components of this product accordance with Italian Legislative Decree 151/amendments and additions. (Directive 2002/96/CE re Electrical and Electronic Equipment)

ectronic waste) must be disposed of in /2005 and subsequent egarding WEEE - Waste

uminium and steel can

| Non è possibile visualizzare l'immegine collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretti.

Non è possibile visualizzare l'immagine collegata. Il file potrebbe essere stato spostato, rinominato o eliminato. Verificare che il collegamento punti al file e al percorso corretti. The parts of the vacuum made of plastic material, alu be recycled in appropriate centres.

Nova à possibile visualizane l'inmegine poulsa, ricement de utilisate de l'invention de l'invention de l'invention de utilisate de l'invention de utilisate de l'invention de l'inven	MAINTENANCE LOG	
INTERVENTION 1	Date	
Technical Assistance		
Type of intervention		
	Signature	
INTERVENTION 2	Date	
Technical Assistance		
Type of intervention		
	Signature	

Non è possibile visualizzare l'immagine collegata. Il file potrebbe essere stato sposato, incimentate e eliminati. Verificare contablegamento punti al file e al percorso corretti.	MAINTENANCE
	LOG

INTERVENTION 3	Date
Technical Assistance	
Type of intervention	
	Signature