

# INSTRUCTION AND MAINTENANCE MANUAL



## M / M65 H ACD / M100 H ACD SERIES

**TRANSLATION OF ORIGINAL INSTRUCTIONS**

---

**Depureco Industrial Vacuums Srl**

Company under the direction and coordination of COFISE S.p.A.

Via Venezia, 32 - 10088 Volpiano (TO), Italy

**Tel.** +39 011 98.59.117

**Fax** +39 011 98.59.326

[www.depureco.com](http://www.depureco.com)

[depureco@depureco.com](mailto:depureco@depureco.com)

[depureco@documentipec.com](mailto:depureco@documentipec.com)

**tax code- and VAT reg no.** 02258610357 - **Share capital:** € 25,000 fully paid up

Turin Company Register - **R.E.A.** TO-1149668

Registered in the **WEEE** register with no. IT18090000010711





## INDEX

<b>1. INFORMATION SECTION</b>	<b>7</b>
1.1. Introduction	7
1.2. Identification of the main parts	9
1.3. Optional parts	10
1.4. Manufacturer's identification data	10
1.5. Identification plate	10
1.6. Intended uses	10
1.7. Permitted environmental conditions	11
1.8. Noise level	11
1.9. Technical data	12
1.10. Warranty	14
<b>2. SAFETY SECTION</b>	<b>15</b>
2.1. Information regarding safety	15
2.2. Safety requirements	15
2.3. Plates and safety symbols	18
2.4. Residual risks	20
2.5. Directives applied	20
<b>3. HANDLING, UNPACKING AND INSTALLATION SECTION</b>	<b>21</b>
3.1. Handling	21
3.2. Unpacking	22
3.3. Installation	23
<b>4. OPERATION SECTION</b>	<b>25</b>
4.1. Description of the controls	25
4.2. Work cycle	26
4.3. air speed control	27
4.4. Filter cleaning cycle	27
4.5. Emptying the container	29
4.6. Inserting and locking the container	31
4.7. Storage - decommissioning	32
<b>5. MAINTENANCE SECTION</b>	<b>33</b>
5.1. Information notes	33
5.2. General safety standards	33
5.3. replacing the main filter	35
5.4. replacing the HEPA filter	40
5.5. INSTALLATION the HEPA filter	42
5.6. If something doesn't work	44
5.7. Scrapping	44





## DECLARATION OF CONFORMITY



### DECLARATION OF COMPLIANCE

The manufacturer:

**DEPURECO INDUSTRIAL VACUUMS S.r.l.** – Via Venezia, 32 – 10088 Volpiano (TO) – ITALY |

**Phone.** +39 011 98 59 117 – **Fax** + 39 011 98 59 326 – **Tax code.** | **VAT REG. NO.**

02258610357

**e-mail:** [depureco@depureco.com](mailto:depureco@depureco.com) – [www.depureco.com](http://www.depureco.com)

**hereby declares**

under their sole responsibility that the vacuum cleaner model described in this manual



To which this declaration refers, complies with the essential safety requirements provided by the **Machinery Directive 2006/42/EC**, the **Directive 2014/30/EU** regarding Electromagnetic Compatibility and the **Directive 2011/65/EU - ROHS** - regarding restriction of the use of certain hazardous substances in electrical and electronic appliances.

The conformity has been verified in accordance with the requirements mentioned by the Standards:

**EN 60335-1**

**EN IEC 61000-3-2:2019**

**EN IEC 63000:2018**

**EN 60335-2-69**

**EN 55014-2:2015**

The Harmonised Standards applied for the design, manufacture and testing of the vacuum cleaner are listed in a technical file stored at the technical department of DEPURECO S.r.l. premises.

The production control was carried out by Notified Body No. **0474 RINA Services S.p.a.**

This declaration shall become invalid if modifications on the vacuum cleaner are carried out without approval from the manufacturer.

First issue: 15 June 2019

Revision 01: 16 October 2023

Revision 02: 26 April 2024

  
The Legal Representative  
Marco Devincentis

**Depureco Industrial Vacuums Srl**  
Società soggetta a direzione e coordinamento CORSE spa

PERFORMANCE ON VACUUM SINCE 1972

Via Venezia, 32 - 10088 Volpiano (TO)  
**Tel.** +39 011 98 59 117  
**Fax** +39 011 98 59 326

[www.depureco.com](http://www.depureco.com)  
[depureco@depureco.com](mailto:depureco@depureco.com)  
[depureco@documenti.ped.igg.it](mailto:depureco@documenti.ped.igg.it)

**C.F. e P.I.** 02258610357  
Registro Imprese di Torino - **R.E.A.** TO-1149668  
**Capitale Sociale:** € 25.000 i.v.





## 1. INFORMATION SECTION

**IMPORTANT** - The DEPURECO term and logo in this document refer to and are the property of DEPURECO INDUSTRIAL VACUUMS S.r.l.

This document is the sole property of DEPURECO S.r.l. Therefore its reproduction with any means (graphic, digital, etc.), whether partially or wholly, is prohibited without authorisation from Management.

### 1.1. INTRODUCTION

Dear Customer,

Thank you for choosing DEPURECO. We hope you will enjoy using your new **M65 / M100 / M65 H ACD / M100 H ACD** series vacuum cleaner.

We have prepared this manual so that you can appreciate the quality of this machine.

Please read it through before using the vacuum cleaner for the first time.

It contains information, tips and important warnings on using and maintaining the vacuum cleaner so that you can take full advantage of the technical qualities of your machine.

Please read the messages, warnings and indications, preceded by symbols, very carefully:



For the safety of people



For the integrity of the vacuum cleaner



For the protection of the environment.

This manual describes the following models:

- M65
- M100
- M65 JC
- M100 JC
- M65 TAN JC
- M100 TAN JC
- M65 H ACD
- M100 H ACD

Machines are classified according to their **dust filtration** efficiency:

- **L (light risk)**: in vacuum cleaners with a class L filter, the maximum degree of dust penetration is less than 1%;
- **M (medium risk)**: in vacuum cleaners with an M filter, the maximum degree of dust particle penetration is less than 0.1%;
- **H (high risk)**: in vacuum cleaners with an H filter, the maximum degree of penetration of dust particles is less than 0.005%; This vacuum cleaner is designed to carry out suction, cleaning and collection of solid materials (dust and processing residues).

This specific model has undergone strict testing to ensure maximum reliability; its smooth operation and long-lasting service life will depend on good maintenance and careful use



This manual is an integral part of the vacuum cleaner and must accompany it throughout its service life, until it is scrapped. If it is lost or damaged, ask DEPURECO INDUSTRIAL VACUUMS S.r.l. (hereinafter simply known as DEPURECO) for a replacement copy.

The technical information in this manual is owned by DEPURECO and must be considered confidential.

Reproduction, even partial, of the graphic design, text and illustrations is prohibited by law.

Some details shown in the illustrations in this manual may differ to those of your vacuum as some components may have been removed to ensure the utmost clarity of said illustrations.

The topics covered in this manual are those expressly required by Machinery Directive 2006/42/EC and the technical data given are from the technical file archived at DEPURECO.

In relation to Regulation 1907/2006/EC (REACH), DEPURECO declares that its products do not contain any of the Substances of Very High Concern (SVHC) included in the Candidate List


This manual can be accessed via the QR code on the vacuum cleaner or via the website [www.depureco.com](http://www.depureco.com). Alternatively, contact the manufacturer Depureco. This manual must be available to all vacuum cleaner operators and maintenance staff  
The Court of Turin (Italy) has jurisdiction for all disputes.

**The QR code with the manual must accompany the vacuum cleaner if it is resold!**




## 1.2. IDENTIFICATION OF THE MAIN PARTS


**M65  
M100  
M65 H ACD  
M100 H ACD**

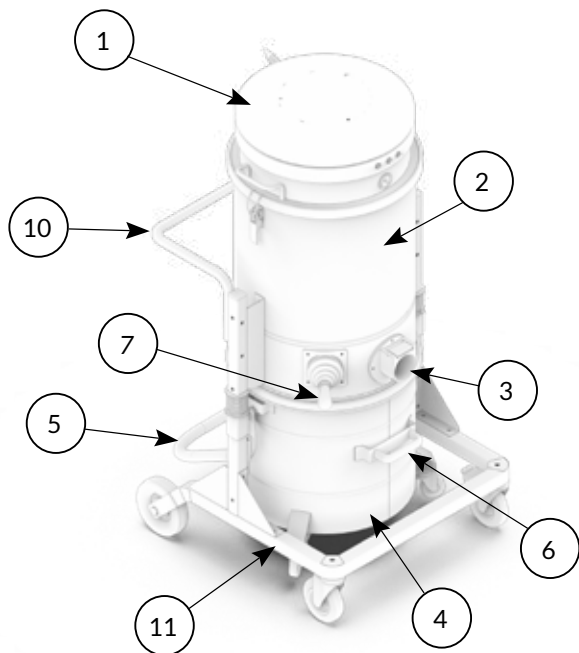

**M65 JC  
M100 JC**

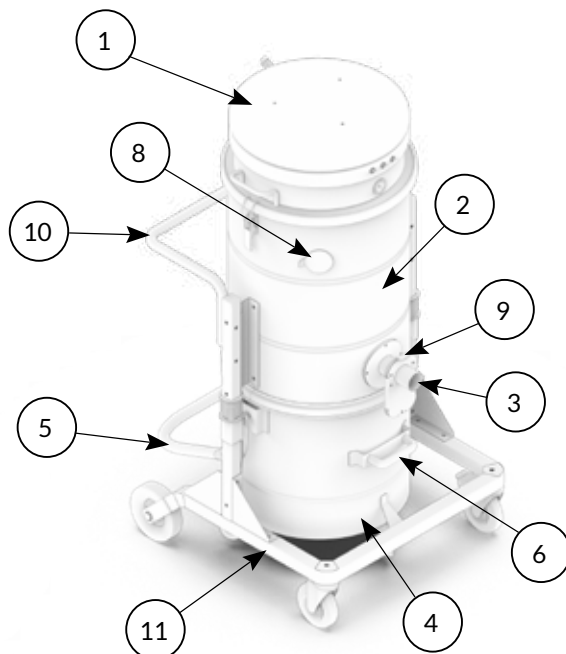

**M65 TAN JC  
M100 TAN JC**

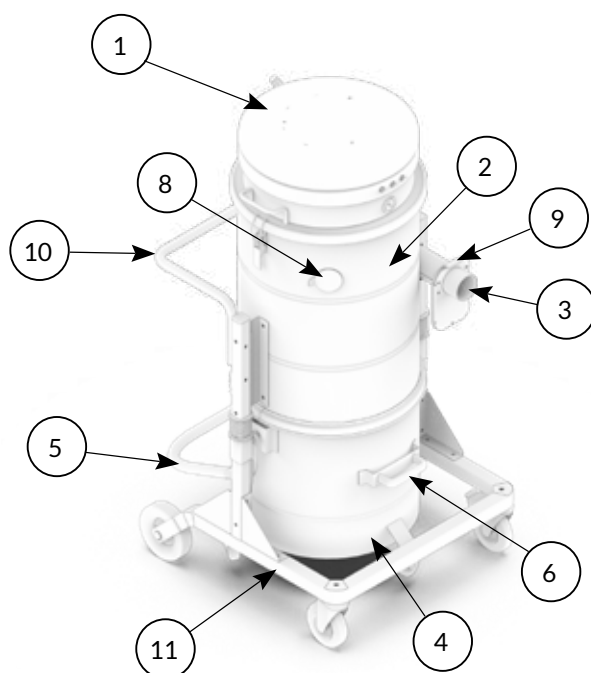

1. Head with on/off commands
2. Filter chamber
3. Suction inlet
4. Dust/Debris bin
5. Lever for releasing and hooking the bin
6. Handle for transporting the bin
7. Lever for manual filter shaking
8. JetClean® valve
9. JetClean® sliding damper
10. Handle for moving vacuum cleaner
11. Frame



### 1.3. OPTIONAL PARTS

Based on the application of the vacuum cleaner, a wide range of other optional accessories is available from DEPURECO

### 1.4. MANUFACTURER'S IDENTIFICATION DATA

Depureco Industrial Vacuums S.r.l.  
Via Venezia, 32 - 10088 Volpiano (TO), Italy  
tel: +39 011 98 59 117 fax: +39 011 98 59 326 VAT Reg. No. 02258610357  
e-mail: depureco@depureco.com - website: www.depureco.com

### 1.5. IDENTIFICATION PLATE

 <b>DEPURECO</b>		Via Venezia, 32, 10088, Volpiano Tel. 011 98 59 117   Fax. 011 98 59 326 www.depureco.com		 <b>MADE IN ITALY</b>
Model		Serial No.		
<div><div></div><div></div><div></div><div></div></div>				
Dust class	IP	Kg	Year	<b>CE</b> <b>UK</b> <b>CA</b>

### 1.6. INTENDED USES

**M65 - M100 - M65 JC - M100 JC - M65 TAN JC - M100 TAN JC**

These vacuum cleaners are built in compliance with Machinery Directive 2006/42/CE to be used by a single operator and are designed to:

- vacuum in industrial environments;;
- vacuum dry, flammable, deposited and health hazardous dust (dust class H according to EN 60335- 2-69);
- vacuum non-explosive dust;
- vacuum flammable dust of all explosion classes (except dust with minimum ignition energy ME < 1 mJ);
- flammable dust from a zone 22, if the unit is installed outside potentially explosive areas.

#### **ATTENTION**

If there are combustible dusts or flammable gases in the workplace, the Employer must classify the Zone and choose a machine of a suitable category (according to the definition given in Directive 2014/34/EU).

Any other use is considered **NON-COMPLIANT**.



## M65 H ACD - M100 H ACD

These vacuum cleaners are built in compliance with Machinery Directive 2006/42/CE to be used by a single operator and are designed to:

- vacuuming of ignition sources and dusts with a glow temperature  $\leq 190^{\circ}\text{C}$ ;
- vacuuming explosive substances or equivalent, explosive vapor-air mixtures, as well as Al and Mg dusts;
- vacuuming flammable fluids (flammable, easily flammable, highly flammable according to the Dangerous Substances Directive 67/ 548/EEC, flash point below  $55^{\circ}\text{C}$ ), as well as of mixtures of flammable powders with flammable fluids;
- vacuuming mixtures of flammable fluids and flammable dusts;
- vacuuming glowing or hot particles to avoid causing a fire or explosion.
- being connected to a dust-generating machine;

### **ATTENTION**

If there are combustible dusts or flammable gases in the workplace, the Employer must classify the Zone and choose a machine of a suitable category (according to the definition given in Directive 2014/34/EU).

Any other use is considered **NON-COMPLIANT**.

## 1.7. PERMITTED ENVIRONMENTAL CONDITIONS

To ensure that the vacuum cleaner works properly, it must be placed where it is protected from adverse weather (rain, hail, snow, fog, suspended dusts, etc.), where the ambient temperature is between  $5^{\circ}$  and  $45^{\circ}\text{C}$  and the humidity is no higher than 70%.

The work environment must be clean and appropriately lit.

## 1.8. NOISE LEVEL

The phonometric tests carried out on this specific model of vacuum cleaner show a sound pressure level of

Machine	Noise level
M65 - M65 JC - M65 TAN JC	72 dB(A)
M100 - M100 JC - M100 TAN JC	72 dB(A)
M65 H ACD	72 dB(A)
M100 H ACD	72 dB(A)

### **ATTENTION**

For sound pressure levels higher than 85 dB(A), workers must be protected by appropriate personal protective equipment (PPE), such as approved ear defenders.

### **ATTENTION**

For these conditions, workers must be trained and informed on the risks resulting from exposure to noise.



## 1.9. TECHNICAL DATA

	Unit of measurement	M65	M100	M65 JC	M100 JC
Weight	[kg]	80	80	80	80
Dimensions	[mm]	660 x 800	660 x 800	660 x 800	660 x 800
Height	[mm]	1300	1515	1300	1515
Power supply voltage/Frequency	[V] - [Hz]	230 - 50/60	230 - 50/60	230 - 50/60	230 - 50/60
Power	[W]-[HP]	3900 - 5,2	3900 - 5,2	3900 - 5,2	3900 - 5,2
Suction inlet diameter	[Ø mm]	70	70	50	50
Motor type		3x By-Pass	3x By-Pass	3x By-Pass	3x By-Pass
Maximum vacuum/ Continuous vacuum	[mbar]	250 / -	250 / -	250 / -	250 / -
Maximum air flow	[m <sup>3</sup> /h]	570	570	570	570
Main filter		Star	Star	Conical cartridge	Conical cartridge
Main filter surface area	[cm <sup>2</sup> ]	24000	24000	35000	35000
Media		Polyester	Polyester	PTFE Coated Polyester	PTFE Coated Polyester
Absolute filter		HEPA H14 *	HEPA H14 *	HEPA H14 *	HEPA H14 *
Absolute filter surface area	[cm <sup>2</sup> ]	22000	22000	22000	22000
Noise level	[dB(A)]	72	72	72	72
Max. capacity	[L]	65	100	65	100



	Unit of measurement	M65	M100	M65 JC	M100 JC
<b>Weight</b>	[kg]	80	80	80	80
<b>Dimensions</b>	[mm]	660 x 800	660 x 800	660 x 800	660 x 800
<b>Height</b>	[mm]	1300	1515	1300	1515
<b>Power supply voltage/Frequency</b>	[V] - [Hz]	230 - 50/60	230 - 50/60	230 - 50/60	230 - 50/60
<b>Power</b>	[W]-[HP]	3900 - 5,2	3900 - 5,2	3900 - 5,2	3900 - 5,2
<b>Suction inlet diameter</b>	[Ø mm]	70	70	50	50
<b>Motor type</b>		3x By-Pass	3x By-Pass	3x By-Pass	3x By-Pass
<b>Maximum vacuum/Continuous vacuum</b>	[mbar]	250 / -	250 / -	250 / -	250 / -
<b>Maximum air flow</b>	[m³/h]	570	570	570	570
<b>Main filter</b>		Star	Star	Conical cartridge	Conical cartridge
<b>Main filter surface area</b>	[cm²]	24000	24000	35000	35000
<b>Media</b>		PTFE Coated Polyester	PTFE Coated Polyester	Polyester antistatic	Polyester antistatic
<b>Absolute filter</b>		HEPA H14 *	HEPA H14 *	HEPA H14	HEPA H14
<b>Absolute filter surface area</b>	[cm²]	22000	22000	22000	22000
<b>Noise level</b>	[dB(A)]	72	72	72	72
<b>Max. capacity</b>	[L]	65	100	65	100

\* = filter optional

The vacuum cleaner is fitted with the following filters, which differ between the supplied and optional filters:

	STAR M	STAR ANTISTATIC	STAR TEFLON	STAR ANTISTATIC TEFLON	STAR NOMEX	CLASS M CONICAL CARTRIDGE	ANTISTATIC CONICAL CARTRIDGE	HEPA H13 CONICAL CARTRIDGE	HEPA H14 CARTRIDGE
<b>M65</b>	●	○	○	○	○	-	-	-	○
<b>M100</b>	●	○	○	○	○	-	-	-	○
<b>M65 JC</b>	-	-	-	-	-	●	-	○	○
<b>M100 JC</b>	-	-	-	-	-	●	-	○	○
<b>M65 TAN JC</b>	-	-	-	-	-	●	-	○	○
<b>M100 TAN JC</b>	-	-	-	-	-	●	-	○	○
<b>M65 H ACD</b>	-	●	-	○	-	-	-	-	●
<b>M100 H ACD</b>	-	●	-	○	-	-	-	-	●

● = filter supplied with the vacuum cleaner

○ = filter optional



## 1.10. WARRANTY

DEPURECO<sup>12</sup> guarantees this vacuum cleaner model for 12 months from the date of purchase, which is indicated on the tax document provided when the product is delivered. The warranty becomes null and void if the vacuum cleaner has been repaired by unauthorised third parties or if equipment, accessories or components not supplied or not authorised by DEPURECO are used or if the serial number is removed (during the warranty period). DEPURECO will repair or replace free of charge those parts or components that are proved, within the warranty period, to have manufacturing defects.

The repair is carried out solely at our premises or at an Assistance centre indicated by us and must be received carriage paid (transport costs to be borne by the user, unless otherwise agreed).

The warranty does not cover cleaning of working parts.

The purchase tax document must be presented to authorised technical staff who will do the repair or it must be sent with the vacuum cleaner. Defects not clearly attributed to material or manufacturing will be examined solely at our premises or at a Technical Assistance Centre indicated by us. If the complaint proves to be unjustified, all costs for repair and/or replacement of parts will be charged to the buyer.

The following are **excluded from the warranty**: accidental damage due to transportation, neglect or inadequate handling, improper use, failure to comply with the warnings in this manual or resulting from phenomena not dependent on normal use/operation of the vacuum cleaner.

DEPURECO is not liable for any damages to people or property caused by poor or imperfect use of the vacuum cleaner.

The Court of Turin (Italy) has jurisdiction for all disputes.



## 2. SAFETY SECTION

### 2.1. INFORMATION REGARDING SAFETY

Pursuant to Italian Legislative Decree 81/08 as amended, the Safety Manager must inform and train workers on the risks associated with using the vacuum cleaner, so that they are able to protect their own safety and that of others.

Failure to observe the basic safety rules or precautions can cause accidents during use, maintenance or repair of the vacuum cleaner. An accident can often be avoided by recognising potentially dangerous situations before they actually occur. Adequate training is a fundamental requirement.

DEPURECO will not be held liable for any accidents or damages resulting from the vacuum cleaner being used by untrained staff or being used improperly, or from failure to observe, even partially, the accident prevention regulations and intervention procedures in this manual.

Safety precautions and warnings are indicated in this manual and on the product itself.

If these danger messages are ignored, the operator can have an accident with serious consequences for himself and for other people.

DEPURECO carefully designs and manufactures the appliances and their accessories, identifying and compensating for all possible risks associated with use. If tools, procedures, work methods or working techniques not explicitly envisaged by DEPURECO are used, you must ensure beforehand that there are no dangers for yourself or for others, even so, DEPURECO will not be held liable.



#### **ATTENTION!**

Only use **original Depureco spare parts**. Depureco is not liable for the use of non-original spare parts.

### 2.2. SAFETY REQUIREMENTS



#### **ATTENTION!**

The instructions below are important in order to completely protect against all dangers that may be encountered when operating the vacuum cleaner.

However, they cannot be separated from the competence and common sense of the operator, as an overall framework for careful prevention of accidents.

Structural damage, modifications, alterations or improper repair can change the protection capability of the vacuum cleaner thus cancelling this certification and excluding any liability by DEPURECO

Each section contains a list of additional safety requirements specific for the different operations.

Prior to use, operators should receive the necessary training in the use of the machine and information on the substances for which it is to be used, including safe methods for removal and disposal of the collected material.



## **ATTENTION!**

### **Commissioning - connection to the mains:**

- Make sure there is no evident sign of damage to the vacuum cleaner before starting work.
- Before connecting to the power socket, make sure that the air hoses are correctly positioned (for vacuum cleaners equipped with an air counterflow cleaning system). Carry out the operation in a safe area, where there are no explosive atmospheres.
- Before connecting the vacuum cleaner to the mains, make sure that the voltage indicated on the plate matches that of the mains.
- Plug the vacuum cleaner into a socket with a correctly installed ground contact/connection. Make sure that the vacuum cleaner is turned off.
- The plugs and connections on the mains power cable must be protected from water splashes.
- Check that the mains is connected properly.
- Make sure that the earthing clamp is properly connected to a point for which continuity with the earthing system is guaranteed.
- Only use vacuum cleaners with the mains power cable in perfect condition to avoid danger of electric shock.
- Regularly check the mains power cable to ensure that there are no damages or signs of wear, cracking or aging.

## **ATTENTION!**

### **During operation, do not:**

- Step on, crush, pull or damage the mains power cable.
- Unplug the cable from the mains by just pulling the cable (pull the plug).
- Only replace the electric power cable with one of the same type as the original.
- The power cable must be replaced by the manufacturer's Assistance Service or by qualified staff.

## **ATTENTION!**

### **It is strictly forbidden:**

- For underage or inadequately trained people to use this vacuum cleaner.
- To connect the electricity to a network without efficient earthing.
- To use outdoors in adverse weather conditions.
- To use and store the vacuum cleaner outdoors in humid conditions.
- To use the vacuum cleaner if the castor wheel is not locked when vacuuming.
- To use the vacuum cleaner on surfaces that are not level and horizontal.
- To use it in corrosive environments.
- To roll or bend the hose during suction.
- For ATEX versions and models, to use hoses with earth wire that is not anti-static (an anti-static surface alone is not permitted).
- Always use original DEPURECO accessories. Use an ohmmeter to check electrical continuity:
  - between the suction inlet and the terminal of suction accessories: the resistance measured must be less than 100M $\Omega$  (for ATEX versions and models)
  - between the container and the plug (earth pin) on an electrical machine, or between the container and the earth wire (supplied) on compressed air models. The resistance measured must be: - less than 10  $\Omega$  (for models and versions with compressed air supply)





- To use the machine in work environments that are not classified according to the instructions given on the machine's identification plate.
- To vacuum the following materials:
  - Burning materials (embers, hot ash, lit cigarettes, etc.)
  - Open flames
  - Combustible gases
  - Flammable, combustible or aggressive liquids (petrol, solvents, acids, alkaline solutions, etc.).
  - Dusts/substances and/or their explosive and spontaneous ignition mixtures (magnesium or aluminium powders, etc.).
- To have prolonged contact with solvents and inhale their vapours.
- To use near open flames or heat sources; ensure adequate ventilation.
- To use the vacuum cleaner in rooms where adequate ventilation is not ensured, especially if the exhaust air is recirculated within the same room. To comply with the required limit values, the recirculation volume flow must not exceed 50% of the fresh air volume.
- To tamper with or modify the pressure relief valve set by the manufacturer (in models where valve is present).
- Do not use the JetClean cleaning system in the presence of potentially explosive clouds in the atmosphere (for models and versions with this cleaning system).
- To carry out maintenance on the industrial vacuum cleaner in ATEX classified areas (for ATEX models and versions).
- To carry out maintenance on the vacuum cleaner without first turning the machine off and unplugging the power cable.
- To keep foreign materials such as debris, oil, tools and other objects inside the container that could damage operation and harm people.
- To use flammable or toxic solvents like petrol, benzene, ether and alcohol for cleaning.
- To use the vacuum cleaner without the filter unit provided by the manufacturer.
- To use the industrial vacuum cleaner without the safety devices or if they are not in proper working condition
- To use the industrial vacuum cleaner with guards not in place.
- Do not place your hands inside the container positioning guides or between the container and the vacuum cleaner during the insertion and locking of the debris container under the vacuum cleaner: the movement of the lifting handle may cause finger crushing. Wear gloves when removing the suction head, filter unit or collection container.
- To open the container with the vacuum cleaner running.
- To open the container in an area classified as potentially explosive.
- To keep the vacuum cleaner switched on and supplied with power via the mains plug in the event of prolonged breaks after use.
- To add extension leads, plug-in connection devices and adapters.
- To step on the vacuum cleaner.
- To move the vacuum cleaner while it is in operation.
- To wear loose or dangling items such as ties, scarves, torn clothing that can get caught or be vacuumed by the vacuum cleaner.
- To touch electrical wires, switches, buttons, etc. with wet hands.
- To touch some of the components (motor terminal block, especially the motor body) that can reach high temperatures while using the industrial vacuum cleaner.

### **ATTENTION!**

This vacuum cleaner may contain dust that is harmful to health.

The emptying and maintenance procedures, including the elimination of dust collection containers, must only be carried out by specialised staff wearing the appropriate personal protective equipment

This manual must always be available for consultation on the expected operating cycle and whenever any doubts arise.

If it is lost or damaged, you must ask DEPURECO for a replacement copy.

## **M65 H ACD - M100 H ACD**

- Observe the safety regulations applicable to the materials to be processed.
- Do not operate the equipment without the complete filter system.
- Simultaneous collection of several combustible dusts in the collection container may lead to fire or explosion.



## 2.3. PLATES AND SAFETY SYMBOLS

Plates bearing safety symbols and/or messages are applied to the vacuum cleaner and the packaging. Their exact location and the nature of the danger are provided in these pages.

### **ATTENTION!**


The plates and symbols shown below are indicative and may not apply to the models of the vacuum cleaner series described. The presence of each symbol varies depending on the specifications of the series and/or individual model.

### **ATTENTION!**

Make sure that all safety messages are clearly legible. The user is required to immediately replace any safety plates that become illegible due to wear or damage.

Clean them with a cloth, soap and water. Do not use solvents, naphtha or petrol. Replace damaged plates asking DEPURECO for new ones.

If a plate is on a part being replaced, make sure that a new plate is affixed to the new part.

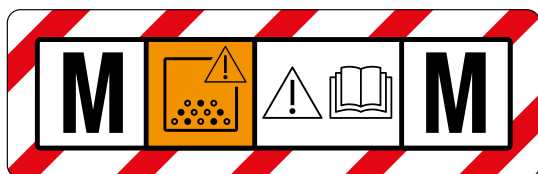

This sticker indicates that the device can vacuum dust up to class M.





This sticker indicates that the device can vacuum dust up to class H.



This sticker indicates the manual filter cleaning system.



This sticker warns of the danger of crushing limbs.



This sticker indicates the need to align the vacuum cleaner's components for its proper functioning.



This sticker indicates that the vacuum cleaner is earthed.



This sticker indicates the supply voltage of the vacuum cleaner.



This sticker indicates the supply voltage of the vacuum cleaner.



This sticker indicates the maximum liquid level inside the container (for models and versions where applicable).



This sticker indicates that the appliance can vacuum combustible dusts in non-Atex classified areas (for dedicated models and versions).

## **ATTENTION!**

Carefully read the instruction and maintenance manual before using the vacuum cleaner or carrying out maintenance.

It is strictly forbidden to take the safety plates off the vacuum cleaner and/or its components and off the packaging.

DEPURECO disclaims any liability for the safety of the vacuum cleaner in the event of failure to comply with this prohibition.



## 2.4. RESIDUAL RISKS

DEPURECO recommends strictly following the instructions, procedures, recommendations in this manual and the current safety standards. Furthermore, DEPURECO recommends using the protective devices provided, both those built into the vacuum cleaner and personal ones.

With this in mind, the residual risks analysed on the vacuum cleaner and/or on its components can be:

### **Electrical risks when carrying out maintenance due to the need to operate with live voltage**

Pursuant to Italian Legislative Decree 81/08 - articles from 80 to 87 - it is forbidden to operate with live voltage, except under the exceptions provided for by said decree.

### **Risk of improper use in the presence of liquid, explosive and flammable substances**

The vacuum cleaner must not be used in an environment containing liquid substances or substances in the form of liquids that can vaporise at room temperature, flammable dusts, gases.

### **Risk of operation in a humid environment**

Observe the limits given in this manual in section 1.7 "Permitted environmental conditions".

### **Risk of misunderstanding the safety pictograms**

With reference to the risk analysis and identification, DEPURECO has affixed danger labels to the vacuum cleaner taken from the legislation relating to graphic symbols.

The user is required to immediately replace any safety plates that become illegible due to wear or damage.

## 2.5. DIRECTIVES APPLIED

The following directives are applied to the vacuum cleaner described in this manual

- 2006/42/EC - Machinery directive.
- 2014/30/EU - Electromagnetic compatibility directive
- 2011/65/EU - RoHS - Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment
- 2014/35/EU - Low voltage directive
- 2014/34/EU - ATEX Directive (for ATEX models and versions)

The regulatory references, including mandatory requirements, are managed in the Quality Management System and archived at DEPURECO.




## 3. HANDLING, UNPACKING AND INSTALLATION SECTION

### 3.1. HANDLING

The following instructions also indicate the operations to be carried out if the vacuum cleaner needs to be repacked or unpacked for subsequent transport.

Packaging dimensions:

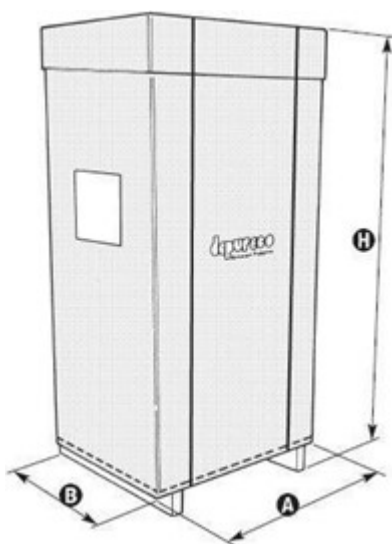

	UM	A	B	H
M65 - M65 JC - M65 TAN JC	[cm]	100	75	150
M100 - M100 JC - M100 TAN JC	[cm]	100	75	190
M65 H ACD	[cm]	100	75	150
M100 H ACD	[cm]	100	75	190

The vacuum cleaner must be lifted and then handled by a forklift truck of adequate capacity to withstand the weight

When moving it with a forklift truck, lift the load 200 mm off the ground and tilt it backwards.

When lifting the load, take into consideration the height of the work environment.


Before starting to move, make sure that the passageway is clear and there are no moving objects on the packaging. For lifting and handling, apply the accident prevention laws in force and the normal handling instructions for forklift trucks.

Only move the unit at walking speed, and on slopes with two people if necessary.




## 3.2. UNPACKING

To unpack the machine, cut the fastening strips then remove the retainers with the help of a hammer and a screwdriver and (for versions and models where applicable) remove the cardboard packaging.

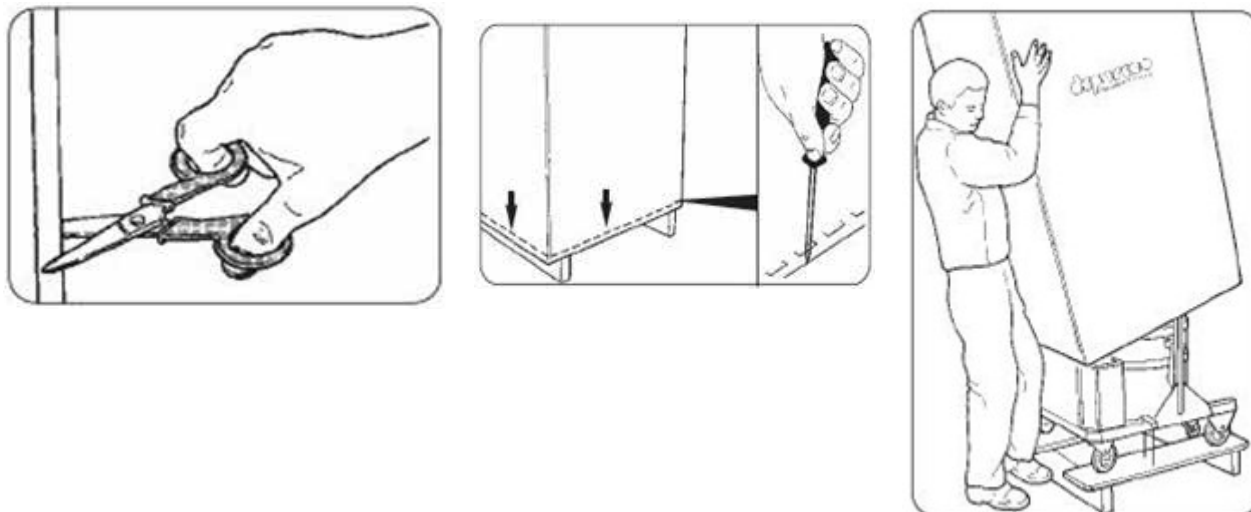

Remove all fasteners provided by the manufacturer during packing using suitable tools.

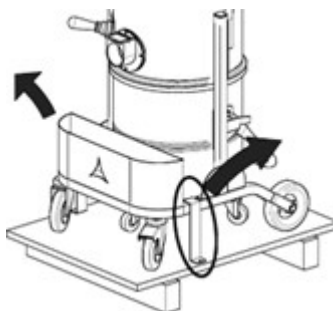

Remove the machine from the support platform with the help of a ramp of suitable capacity and guide the vacuum cleaner using the handle.

Conduct these operations on flat and horizontal surfaces. The load-bearing capacity of the surfaces must be appropriate to the weight of the machine.

Allow ample space around the plant to enable free movement and facilitate easy access for operators in preparation for future maintenance work.

### **ATTENTION!**

Depureco is not liable for any damage caused to the machine during lifting if the appropriate equipment is not used.

### **ATTENTION!**

In the event of subsequent transport, the vacuum cleaner must be anchored to the support platform using a locking system similar to the previously described one.

### **ATTENTION!**

Dispose of packaging materials in accordance with current legislation.



### 3.3. INSTALLATION

#### **ATTENTION!**


Before installing the vacuum cleaner, it is necessary to comply with section 2.2, "Safety requirements".

#### **ATTENTION!**

Before installing the vacuum cleaner, visually inspect it for any damage that may have occurred during transport.

If any of the components are damaged, it is essential not to continue with installation but to report the anomaly found to Depureco and reach an agreement on the actions to be carried out. The machine is supplied with the filtering unit already installed.

- Insert the hose fitted with a terminal into the suction nozzle fitted with a reducer;
- Insert the appropriate accessory for the type of vacuuming from the opposite side of the hose

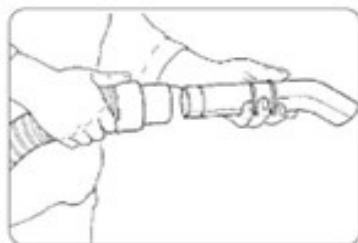


Note: the hose with its terminals and suction accessories are not included in the STANDARD equipment. Contact your dealer (or DEPURECO) for information on the different types of OPTIONAL accessories that can be used for this specific vacuum cleaner model.

#### Connection to power supply

#### **ATTENTION!**

The following operation must be carried out by an electrician.

Check that the power supply line corresponds to the voltage and frequency indicated on the vacuum cleaner's plate and that it is efficiently earthed.

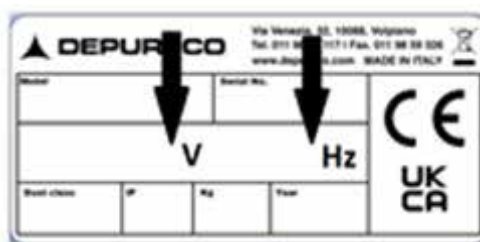

The vacuum cleaner's power socket must be protected by a mains disconnect switch in accordance with EC standards. Lastly, insert the plug (supplied as standard) into the socket.



## **ATTENTION!**

Do not push the plug into the socket with wet hands. Extension leads are prohibited.  
Before plugging the vacuum cleaner into the power socket, make sure that:

- The power cable is undamaged and in perfect condition.
- The voltage of the power supply line corresponds to the voltage indicated on the nameplate of the vacuum cleaner.
- The power plug is plugged into the socket correctly.
- The hose is properly inserted and locked in the suction inlet.
- The debris container / Endless Bag is in place and locked on the vacuum cleaner.
- No dust escapes when changing accessories.





## 4. OPERATION SECTION

### 4.1. DESCRIPTION OF THE CONTROLS

#### ⚠ **ATTENTION!**

Before using the vacuum cleaner, it is necessary to comply with section 2.2, "Safety requirements".

#### ⚠ **ATTENTION!**


Only authorised staff who have read these use and maintenance instructions are allowed to use the vacuum cleaner. The appliance user and the maintenance technician who carry out the permitted operations on the vacuum cleaner must receive appropriate information and training, as required by current laws on safety in the workplace, and wear the personal protective equipment (PPE) provided for the different operations, such as safety footwear, gloves, safety goggles, mask, etc. The user must adhere to the current provisions for vacuumed materials and their disposal.

#### ⚠ **ATTENTION!**

Before using it again, the personnel in charge must ensure that the normal safe operating conditions of the vacuum cleaner are met, particularly regarding the safety devices and protective guards involved in the operation.

#### ⚠ **ATTENTION!**

In the event of prolonged breaks in operation and at the end of use, turn off the appliance using the appliance switch and disconnect the mains plug.

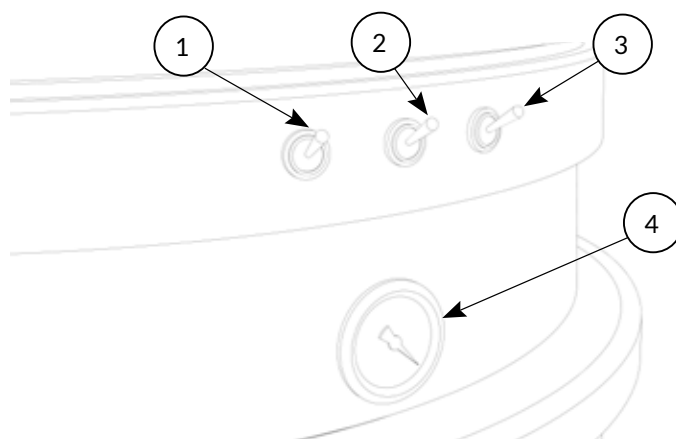

1. Switch **ON-OFF first motor**
2. Switch **ON-OFF second motor**
3. Switch **ON-OFF third motor**
4. Pressure Gauge: indicates filter clogging

### REMOTE CONTROL - OPTIONAL

Schuko 24 V socket for power supply and remote control from power tools (max 2000 W).



#### ⚠ **WARNING!**

**Danger of electric shock.**

Danger of injury and damage. The socket is intended only for direct connection of power tools to the socket. Any other use of the socket is not allowed.

#### How to use it:

- Insert the plug of the power tool into the suction cup.
- The vacuum cleaner is in stand-by mode.
- Turn on the power tool.
- If set to **AUTOMATIC** mode the vacuum cleaner will automatically turn on and off.




## 4.2. WORK CYCLE

Before starting suction, the requirements of section 2.2 "Safety requirements" must be complied with. In particular:

- Make sure the power supply cable is undamaged and in perfect state.
- Before plugging into the power socket, make sure that the voltage of the power supply line matches the one indicated on the data plate of the appliance.
- Make sure the power plug is plugged into the socket correctly.
- Make sure that the vacuum arm or hose is properly inserted and locked into the vacuum nozzle.
- Make sure that the debris container is in place and locked under the vacuum cleaner chamber.
- Make sure that the Endless Bag s in place and locked under the vacuum cleaner chamber.

To start vacuuming, please follow these steps:

- Lock the vacuum cleaner by means of the lever on the swivel wheels, as shown in the figure. Use the handle on the back of the machine to move the vacuum cleaner.

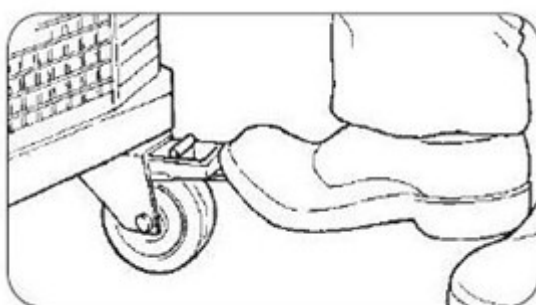

### **ATTENTION!**

Do not move the vacuum cleaner while it is in operation.

- Grip the end of the hose with the chosen suction accessory or place the end of the suction arm at the suction point.
- Activate one of the switches (Items 1,2 and 3 section 4.1) and start vacuuming.
- For greater suction power activate the second motor and/or third motor with the others switches.
- To turn the vacuum off the previously activated motors must be deactivated.

### **ATTENTION!**

**Do not step on, crush, pull or damage the mains power cable during operation. Do not unplug the cable from the mains by pulling the cable (pull the plug).** In case you need to replace the power supply cable, replace it only with one of the same type as the original. Replacement must be carried out by the manufacturer or equivalent qualified personnel.

Personnel responsible for plant safety must ensure that:

- Any improper use or action is avoided.
- Safety devices are not removed or tampered with.
- Regular maintenance work is carried out.
- Machine parts (attachments, holes, etc.) must not be modified for any reason to fit additional devices.
- Only use original Depureco spare parts.
- Avoid rolling or bending the hose while vacuuming.

If dust is escaping from the vacuum cleaner head, the filter may have broken. In this case, the vacuum cleaner should be stopped immediately.



### 4.3. AIR SPEED CONTROL

A pressure gauge is installed in the front of the unit (Item 4 section 4.1), which indicates the vacuum level inside the vacuum cleaner. As the vacuum increases, there is a proportional reduction in suction power. If the vacuum reaches 140 mbar, immediate action is required.

- Check the hose and/or suction accessory for clogging and eliminate the cause of clogging.
- Run a filter cleaning cycle (section 4.4).
- Stop work and replace filters.



### CAUTION!


Never use the vacuum cleaner with the filter clogged.

### 4.4. FILTER CLEANING CYCLE

It is advisable to perform a filter cleaning cycle every 20 minutes of use or if you notice a drop in performance. To carry out a filter cleaning cycle, proceed as follows:

#### M65 - M100 - M65 H ACD - M100 H ACD

- Switch off the machine.
- Wait for the motors to come to a complete stop.
- Lift and then lower vigorously the lever to shake the inner filter.

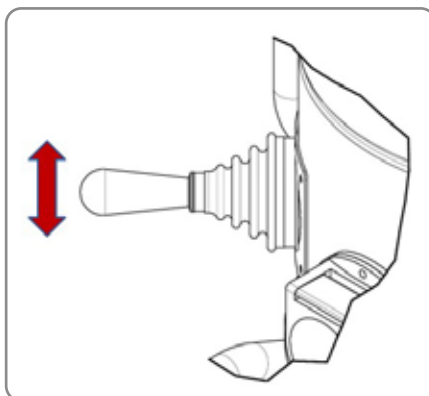


#### M65 JC - M100JC - M65 TAN JC - M100 TAN JC

The vacuum cleaners in the "JC" and "TAN JC" models, are equipped with the JetClean® cleaning system. The system works thanks to the difference in pressure between the internal atmosphere and the external atmosphere leading to the dust becoming detached from the filtering fabric of the cartridge, without needing to switch the vacuum cleaner off.


To carry out a filter cleaning cycle, proceed as follows:

- With the vacuum cleaner turned on, lift the sliding damper (Item 9 section 1.2) on the inlet.

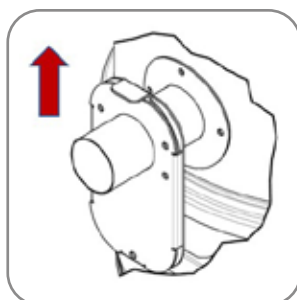




- Open and quickly release the JetClean® valve (Item 8 section 1.2) and repeat this operation a couple more times.

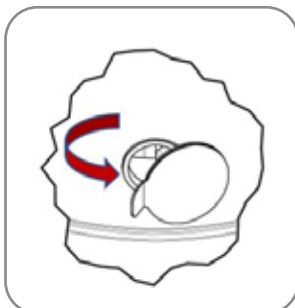

- Lower the shutter and resume normal use

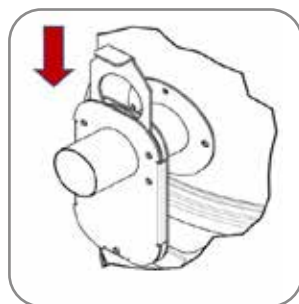

## SP CLEANING SYSTEM - OPTIONAL

### M65 - M100

Cleaning is carried out automatically and continuously while the filter is in use.

For information on the use and maintenance of the PN 2-12 cyclic sequencer shown in the figure, please refer to the dedicated manual.





## ALL MODELS

If the vacuum cleaner does not work properly after the filter has been cleaned, the main filter may need replacing (see dedicated chapter). If the vacuum does not significantly improve after replacing the filter, it means that another issue may be present (see chapter "If something doesn't work")

### **CAUTION!**

Never use the machine if the filter is clogged.

### **ATTENTION!**

If dust is escaping from the silencer, the filter may have broken. In this case, it is necessary to immediately switch off the vacuum cleaner and verify the cause.

## 4.5. EMPTYING THE CONTAINER

### **ATTENTION!**


The container/Endless Bag must not only be emptied when full, but also at the end of each use and before the vacuum cleaner is transported. During this operation, use the appropriate PPE (gloves, dust mask, goggles, etc.).

### **CAUTION!**


Depending on the type and amount of material vacuumed, the debris container/Endless Bag should be checked periodically to prevent it from being overfilled.

Empty the container as follows:

- Turn off the machine.
- Lock the vacuum cleaner by means of the lever on the swivel wheels.
- Wait for the motors to come to a complete stop
- Unlock the container by lifting the special handle.

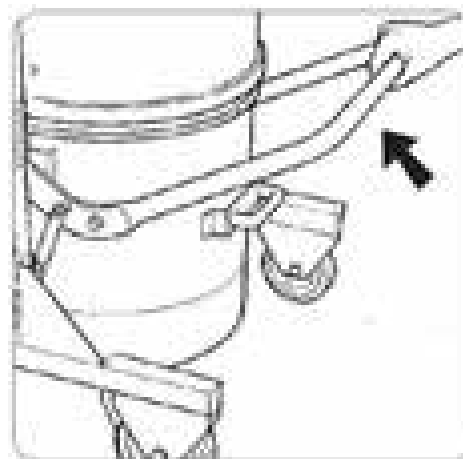

- Remove the container under the filter chamber using the handle.

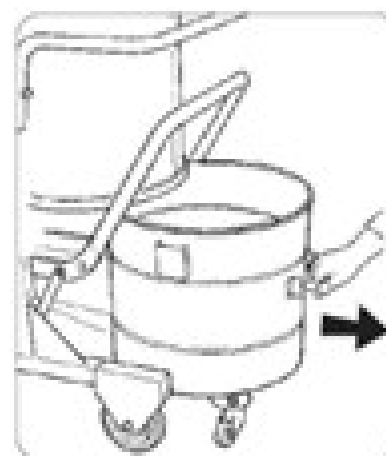



- Empty the debris in a dedicated waste disposal bin in accordance with local legislations.



If a plastic bag is used to collect the debris, replace as follows:

- After removing the container, tie the bag, take it out and insert a new bag.



### **ATTENTION!**

If the container weighs more than 15 Kg, at least two people are needed to empty it.

### **ATTENTION!**

Waste must be disposed of in compliance with the laws in force in the country where the vacuum cleaner is used - for Italy, Legislative Decree 152/2006 as amended.

Clean the appliance inside and out by vacuuming and with a damp cloth.

When vacuuming, use a vacuum cleaner with an equal or better rating.

### **ATTENTION!**


If dusts that can give rise to self-ignition are vacuumed, the collection bin must be emptied immediately after each activity.

This precaution must also be taken when vacuuming different types of dust, the mixture of which can give rise to exothermic reactions.

## **ENDLESS BAG SYSTEM - OPTIONAL**

### **M65 - M100 - M65 JC - M100 JC - M65 TAN JC - M100 TAN JC**

The material is collected inside a robust plastic bag called an Endless Bag that is 20 metres long. The bag is rolled underneath the chamber and can be adapted to any requirement. The operator, once the bag is filled, can close it over the vacuumed material that automatically falls into it, seal it, cut the bag segment with the debris and dispose of it safely, without any contact between operator and material.

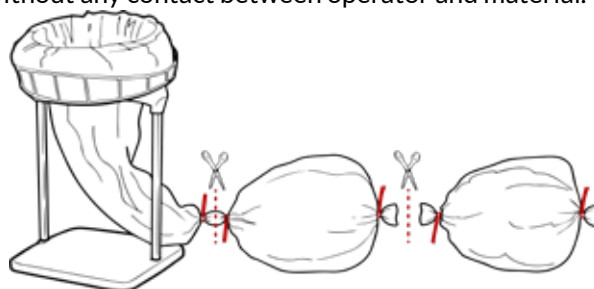




## 4.6. INSERTING AND LOCKING THE CONTAINER

Insert and lock the container as follows:


- Place it under the vacuum cleaner while holding the lever up and push until it reaches the stops.



- The “A” pins on both sides must be aligned with “B” the slots.

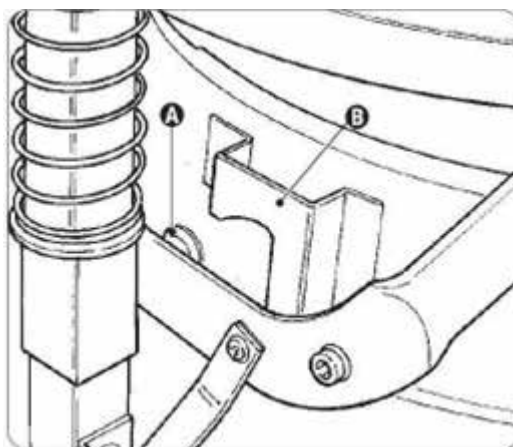

- Push the container locking lever all the way down with both hands.

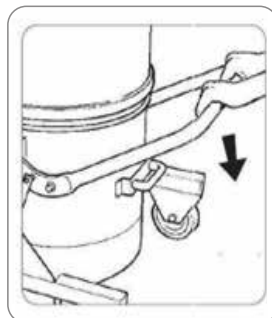

### **ATTENTION!**

**Danger of crushing upper limbs!**

**Never insert hands between the container and the vacuum cleaner when locking it.**

**Use BOTH HANDS to lock the container by pushing the lever.**




## ENDLESS BAG - OPTIONAL

### M65 - M100 - M65 JC - M100 JC - M65 TAN JC - M100 TAN JC

To replace the Endless bag, proceed as follows:

- Turn off the machine.
- Rotate the hooks under the filter chamber to unlock the bag's support ring.

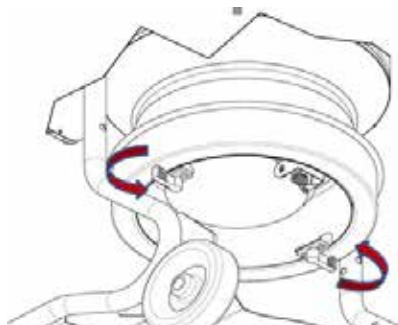

- Pull out the ring and remove the last portion of the bag.
- Place the new bag inside the ring.
- Place the bag support ring under the chamber and lock it with the hooks.
- Pull down the outer flap of the bag to the bottom of the vacuum pool cleaner and close the lower part of the bag with the clamp provided.

To watch the Endless Bag installation and replacement operation video, frame the QR-CODE below:



## 4.7. STORAGE - DECOMMISSIONING

Remove the filter and clean it, empty the debris container and store the vacuum cleaner in a place sheltered from adverse weather with a temperature between 5° and 45°C, then cover it with a nylon sheet to prevent dust from settling on it.





## 5. MAINTENANCE SECTION

### **ATTENTION!**

Extraordinary maintenance of the vacuum cleaner may only be carried out by specialised technicians approved by the DEPURECO dealer.

### 5.1. INFORMATION NOTES

The utmost reliability of the vacuum cleaner and the minimum maintenance cost are due to a planned maintenance and inspection program that is meticulously followed throughout the entire service life of the vacuum cleaner. It is important to:

- Strictly follow the set maintenance times and intervention frequencies according to the specific needs of the vacuum cleaner's production cycle.
- Always use tools in perfect condition and specific for the operation to be carried out; using unsuitable and inefficient tools can cause serious damage.
- Any other intervention deemed necessary to eliminate faults or malfunctions must be expressly authorised by the manufacturer.
- For major repairs, it is advisable to contact the authorised dealer whose specialised personnel, equipped with all the technological expertise of the original factory construction, are always on call and able to intervene promptly.
- If maintenance is to be carried out by the user, it is necessary to disassemble, clean and carry out maintenance on the vacuum cleaner, provided that this is possible, without causing dangers for maintenance staff and third parties. Appropriate precautionary measures include decontamination before disassembly, measures for forced filtered ventilation in the room where the appliance is to be disassembled, cleaning of the maintenance area and suitable personal protective equipment.
- At least once every three months (or more frequently depending on the work cycle and the conditions of use), the manufacturer or qualified person must inspect the filters to make sure that they are not damaged and also ensure that the control devices work properly.

### **ATTENTION!**

After maintenance work or repairs are carried out, all contaminated objects that cannot be satisfactorily cleaned must be put in waterproof bags and disposed of in compliance with the laws in force

### 5.2. GENERAL SAFETY STANDARDS

### **ATTENTION!**

All maintenance, repair or cleaning operations must be carried out with the plug disconnected from the power socket (and the air disconnected for the SP system). Wear suitable PPE (protective clothing, safety goggles and/or gloves, etc.) for the work to be carried out.

Put a sign on the vacuum cleaner that says:  
**"MACHINE UNDER MAINTENANCE DO NOT START"**

Before resuming service, check the entire system again according to the start-up procedures.  
After each maintenance operation, run a few test cycles to ensure that the machine works properly. Failure to observe these precautions can cause serious harm to staff.  
Maintenance work must be carried out by specialist technicians who are trained in the specific sectors which for this machine are:

- Mechanical maintenance;
- Electrical maintenance.

It is the precise duty of the **Safety Manager** to ensure the professionalism and competence of the aforementioned people.



Before starting a maintenance intervention, the Safety Manager must:

- Have any unauthorised people moved out of the work area;
- Make sure that the necessary tools are within reach of the maintenance technician and are in good condition;
- Make sure that the maintenance technician has the personal protective equipment necessary for the specific operation (gloves, goggles, shoes, mask, etc.).
- Make sure that the maintenance technician has carefully read the instructions in this manual and is completely familiar with operation of the vacuum cleaner and its components.
- Ensure that there is enough light and, if necessary, provide portable 24 V lamps.

Before starting a maintenance intervention, the Maintenance Technician must:

- Disconnect all power supply;
- Put the vacuum cleaner in a safety lockout condition;
- Disconnect the compressed air connection (where applicable).

### **ATTENTION!**

If it is absolutely necessary to perform maintenance operations with the power on, as stipulated by Italian Legislative Decree 81/08, the maintenance technician must maintain a safe distance, keep emergency stop buttons within reach, and avoid placing their hands in the discharge container.

When the intervention has been completed and before resuming the service, the maintenance technician must check operation of the safety devices again and ensure that the protections are intact.

Work on the motors or on other electrical components must only be carried out by an appropriately trained electrical maintenance technician who is authorised by the Safety manager.

### **ATTENTION!**

**After each maintenance operation, it is mandatory for the Safety Manager to ensure that the vacuum cleaner and its protection devices are safe.**

**Before each work shift:**

- Check that the power cable and plug are undamaged: replace immediately if there are signs of wear and tear, using a cable of the same type (information c/o DEPURECO); this is the exclusive responsibility of an electrician.
- Ensure that the safety symbols (pictograms) affixed to the vacuum cleaner are intact.
- Make sure that the debris container is empty and locked under the vacuum cleaner.
- Check that the filter is working properly by checking the warning light or vacuum gauge.
- Regularly inspect the vacuum hose and accessories to ensure that they are all intact.

### **ATTENTION!**

If the hose is pierced, the vacuum power will be reduced and the dust will be dispersed into the air.



### 5.3. REPLACING THE MAIN FILTER

#### **ATTENTION!**


Wear appropriate PPE (dust mask, latex gloves, goggles, etc.).

Replace the **star filter** as follows:


- Switch off the machine by turning the switch from **I** to **O**.
- Disconnect the vacuum cleaner from the power supply.

#### **M65 - M100 - M65 H ACD - M100 H ACD**

- Remove the container as described in section 4.5.
- From the underside of the filter chamber, unhook the clip and pull out the pin securing the cage to the filter-shaking lever.

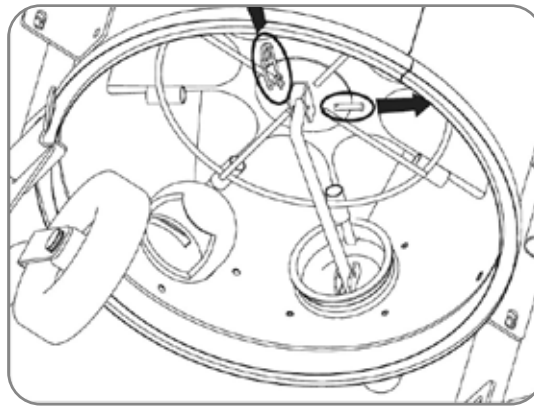

- Unlock the “C” hooks on the sides of the head base on the filter chamber.

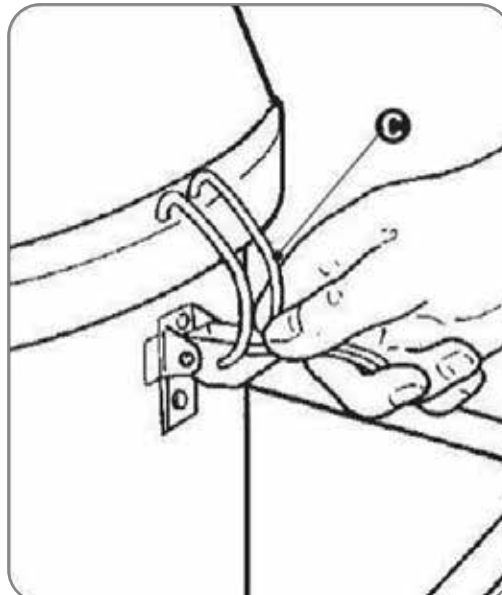





- Remove the vacuum's head and place it on a work bench.
- Slip out the filter (D) and place it on a work bench.



- Loosen the fastening clip (E), remove the filter from its support.

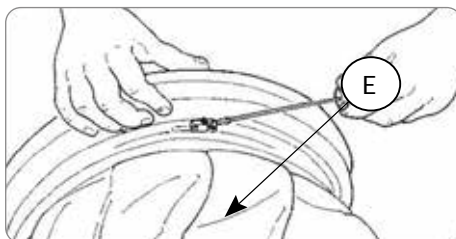

- With scissors cut the lower belts that clamp it to the filter's cage.

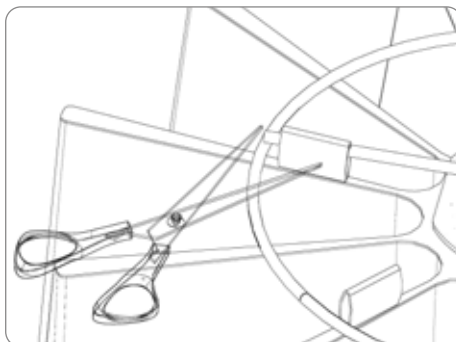


### **⚠ ATTENTION!**

Use appropriate lifting straps for the total weight of the motor base.


**M65 JC - M100 JC - M65 TAN JC - M100 TAN JC**

- Unlock the "C" hooks on the sides of the head base on the filter chamber.

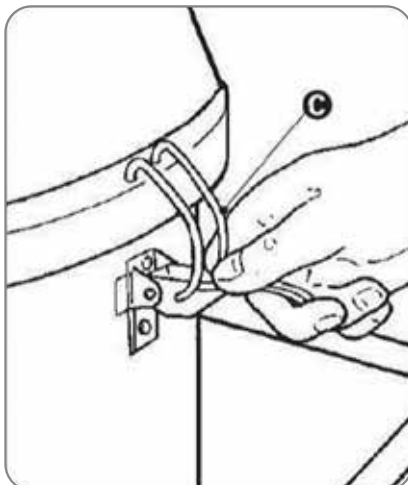



- Remove the vacuum's head and place it on a work bench.
- Unscrew the filter cartridge end remove it from inside the chamber.

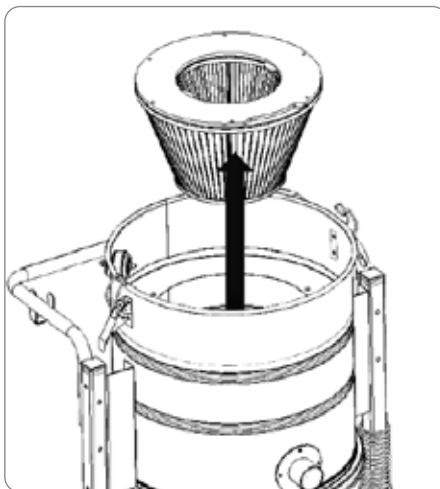

#### ALL MODELS

#### **ATTENTION!**

Remove the filter, put it in a plastic bag, close it and **dispose of it according to the laws in force** for the type of material vacuumed.

 **USE ONLY DEPURECO ORIGINAL FILTERS!**

 **TO MOUNT THE NEW FILTER, REVERSE THE STEPS PREVIOUSLY DESCRIBED.**

#### SP CLEANING SYSTEM - OPTIONAL

#### M65 - M100

#### **ATTENTION!**

Wear appropriate PPE (dust mask, latex gloves, goggles, etc.).


Replace the filter cartridges, proceed as follows:

- Switch off the vacuum cleaner.
- Disconnect the vacuum cleaner from the power supply and the compressed air supply.
- Disconnect the SP cleaning system from electrical connector (F).







- Unlock the “C” hooks on the sides of the head base on the filter chamber.

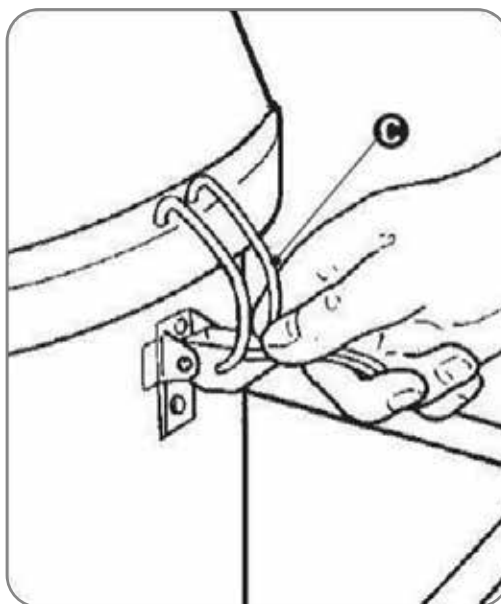

- Remove the cap and place it on a work bench.
- Unlock the SP cleaning system from the “A” locking hooks.

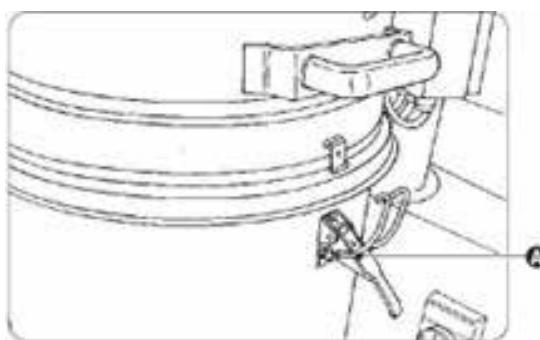


- Using an “H” eye bolt (not included in the supply) with GAS threading and a male G1 connection (screw the eye bolt into the threaded hole on the upper face of the “I” tank) and with the aid of appropriate equipment (straps and lifting and handling systems), lift the “G” filter cartridge support assembly and place it upside down on a workbench.

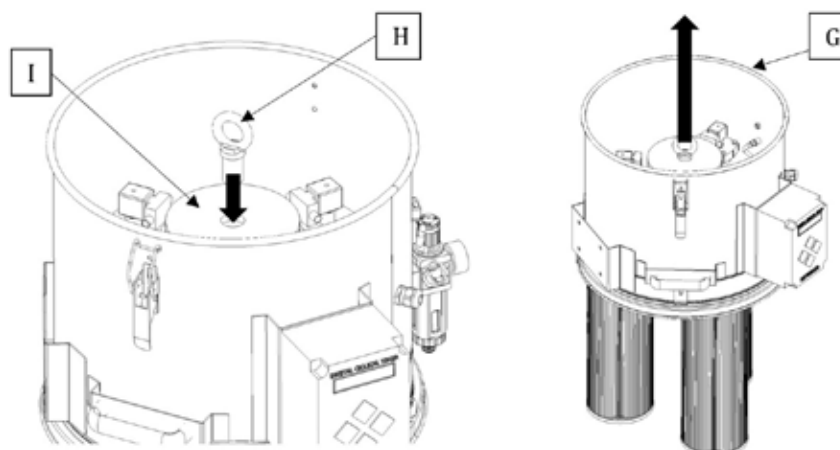




- Remove and unscrew the nuts (I) from the base of the cartridges.

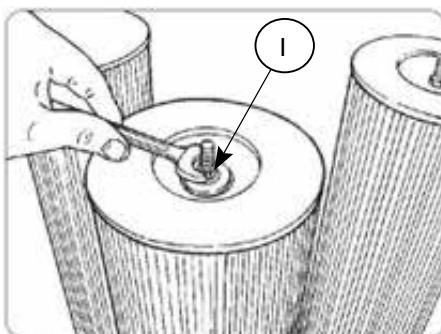

- Pull out and replace the filter cartridges

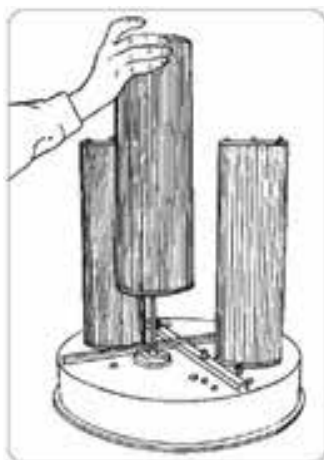

### **ATTENTION!**

Remove the filter, put it in a plastic bag, close it and **dispose of it according to the laws in force** for the type of material vacuumed.

**⚠ USE ONLY DEPURECO ORIGINAL FILTER CARTRIDGES!**

**⚠ TO MOUNT THE NEW FILTER CARTRIDGES, REVERSE THE STEPS PREVIOUSLY DESCRIBED.**



## 5.4. REPLACING THE HEPA FILTER

### **ATTENTION!**


Wear appropriate PPE (dust mask, latex gloves, goggles, etc.).

Replace the HEPA filter as follows:


- Switch off the machine.
- Disconnect the vacuum cleaner from the power supply.

### **M65 H ACD - M100 H ACD**


- Unlock the “C” hooks on the sides of the head base on the filter chamber.

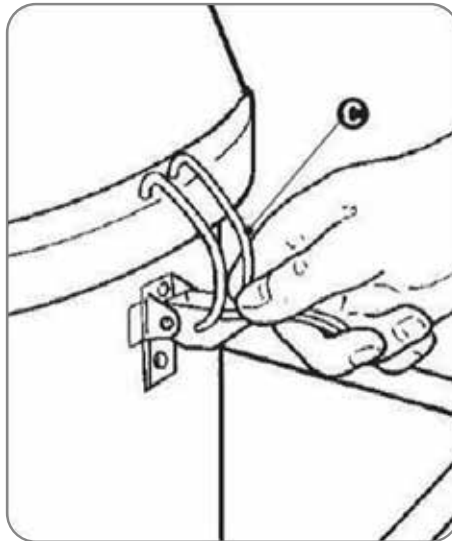

- Place the vacuum's head on the work bench.
- Unscrew the nut (L) of the HEPA filter.

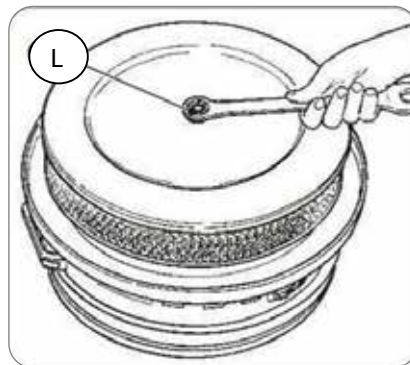

- Remove the filter from the vacuum's head.

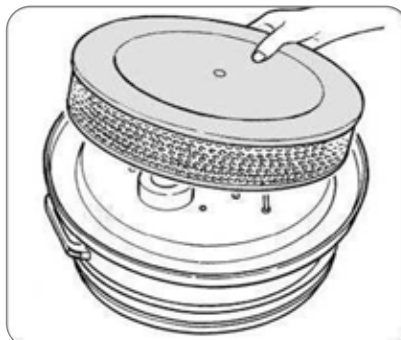







## HEPA FILTER - OPTIONAL

### M65 - M100 - M65 JC - M100 JC - M65 TAN JC - M100 TAN JC


- Unlock the “C” hooks on the sides of the head base on the filter chamber.

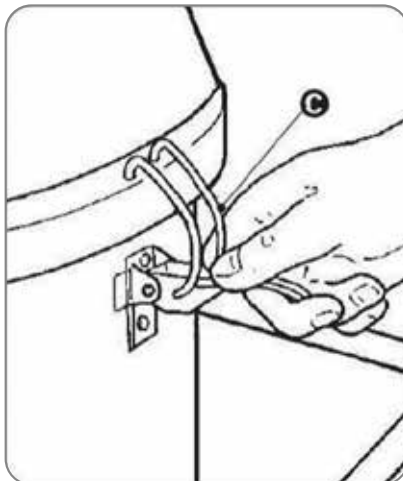

- Place the vacuum's head on the work bench.
- Unscrew the nut (L) of the HEPA filter.

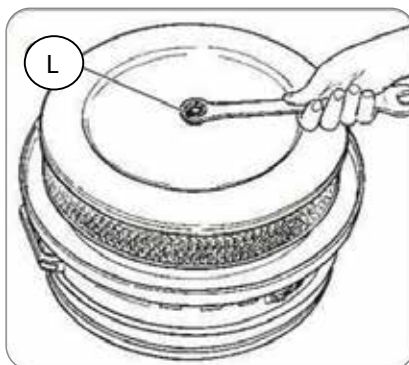

- Remove the filter from the vacuum's head.

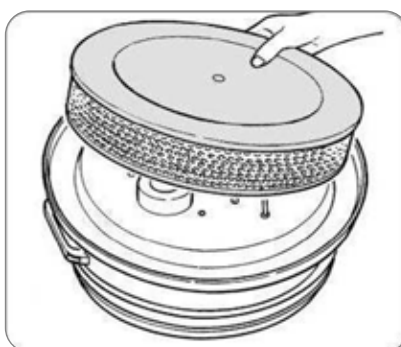

## ALL MODELS

### **ATTENTION!**

Remove the filter, put it in a plastic bag, close it and **dispose of it according to the laws in force** for the type of material vacuumed.

**⚠ USE ONLY DEPURECO ORIGINAL HEPA FILTERS!**  
**⚠ TO MOUNT THE NEW FILTER, REVERSE THE STEPS PREVIOUSLY DESCRIBED.**



## 5.5. INSTALLATION THE HEPA FILTER

### **! ATTENTION!**

Wear appropriate PPE (dust mask, latex gloves, goggles, etc.).


Replace the HEPA filter as follows:

- Switch off the machine.
- Disconnect the vacuum cleaner from the power supply.


### HEPA FILTER - OPTIONAL

#### M65 H ACD - M100 H ACD


- Unlock the “C” hooks on the sides of the head base on the filter chamber.

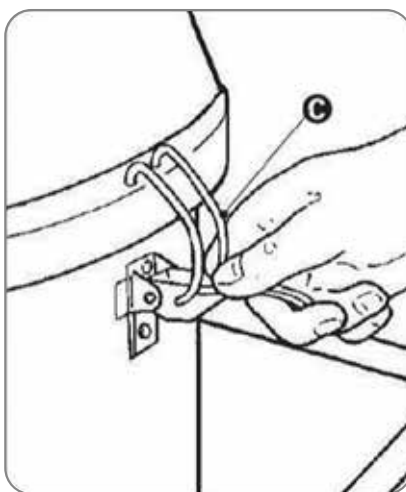

- Place the vacuum's head on the work bench.
- Screw the spacer (M) provided in the HEPA kit.

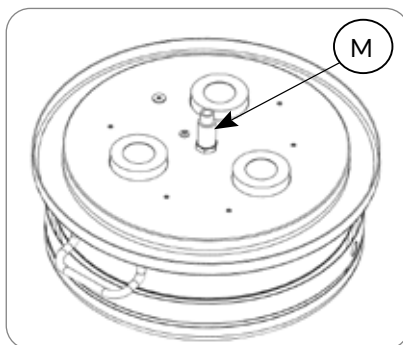


- Install the HEPA filter on the vacuum's head.

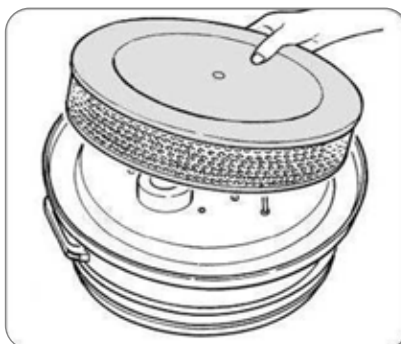



- Place the washer and screw the nut (L) of the HEPA filter.

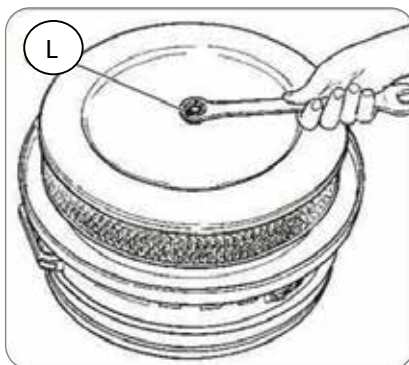

### **ATTENTION!**

Remove the filter, put it in a plastic bag, close it and **dispose of it according to the laws in force** for the type of material vacuumed.

**⚠ USE ONLY DEPURECO ORIGINAL HEPA FILTERS!**

**⚠ TO REMOVE THE HEPA FILTER, REVERSE THE STEPS PREVIOUSLY DESCRIBED.**

**⚠ ATTENTION! FOR SOME MODELS THE HEPA FILTER IS OPTIONAL!**



## 5.6. IF SOMETHING DOESN'T WORK

FAULT FOUND	POSSIBLE CAUSE	RECOMMENDED SOLUTION
The vacuum cleaner does not start	No power	<ul style="list-style-type: none"><li>• Check the power socket for voltage;</li><li>• Check the socket and power supply cable to make sure they are intact;</li><li>• Contact the DEPURECO technical assistance service.</li></ul>
The red light on or vacuum gauge indicates an irregular depression	Clogged filter	Shake the filter. If this is not enough, replace it.
	Clogged suction pipe	Check the suction hose and clean it.
Dust coming out of the vacuum cleaner	Pierced filter	Replace the filter
	Filter not suitable for the type of material to be vacuumed	Fit a filter suitable for the type of material to be vacuumed
Excessively noisy engine	Faulty pump	Contact the DEPURECO technical assistance service

## 5.7. SCRAPPING

### **ATTENTION!**

In case of scrapping, in order to avoid damage to the environment, all vacuum cleaner components must be disposed of responsibly, in appropriate landfill sites in accordance with the relevant national regulations. Vacuum cleaner parts made of plastic, aluminium and steel can be recycled by disposing of them in the appropriate collection centres.

The crossed-out wheellie bin symbol on the appliance's label indicates the compliance of this product with the legislation on waste electrical and electronic equipment. Abandoning the appliance in the environment or its illegal disposal is punishable by law.



REGISTERED ON THE WEEE REGISTER WITH NO. IT18090000010711



## MAINTENANCE LOG

MODEL: \_\_\_\_\_

SERIAL NUMBER: \_\_\_\_\_

DELIVERY DATE: \_\_\_\_\_

COMPANY: \_\_\_\_\_

STREET: \_\_\_\_\_ STREET NUMBER. \_\_\_\_\_

CITY: \_\_\_\_\_ POSTCODE: \_\_\_\_\_

SECTOR \_\_\_\_\_

TELEPHONE: \_\_\_\_\_

PERSON IN CHARGE: \_\_\_\_\_

STAMP:

### Depureco Industrial Vacuums Srl

Company under the direction and coordination of COFISE S.p.A.

Via Venezia, 32 - 10088 Volpiano (TO), Italy  
**Tel.** +39 011 98.59.117  
**Fax** +39 011 98.59.326

**www.depureco.com**  
depureco@depureco.com  
depureco@documentipec.com

**tax code- and VAT reg no.** 02258610357 - **Share capital:** € 25,000 fully paid up  
Turin Company Register - **R.E.A.** TO-1149668  
Registered in the **WEEE** register with no. IT18090000010711



**INTERVENTION 1:**

**DATE:**

TECHNICAL ASSISTANCE:

---

---

---

---

---

TYPE OF INTERVENTION:

---

---

---

---

**INTERVENTION 2:**

**DATE:**

TECHNICAL ASSISTANCE:

---

---

---

---

---

TYPE OF INTERVENTION:

---

---

---

---

**Depureco Industrial Vacuums Srl**

Company under the direction and coordination of COFISE S.p.A.

Via Venezia, 32 - 10088 Volpiano (TO), Italy  
**Tel.** +39 011 98.59.117  
**Fax** +39 011 98.59.326

**www.depureco.com**  
depureco@depureco.com  
depureco@documentipec.com

**tax code- and VAT reg no.** 02258610357 - **Share capital:** € 25,000 fully paid up  
Turin Company Register - **R.E.A.** TO-1149668  
Registered in the **WEEE** register with no. IT18090000010711



**INTERVENTION 3:**

**DATE:**

TECHNICAL ASSISTANCE:

---

---

---

---

---

---

TYPE OF INTERVENTION:

---

---

---

---

**INTERVENTION 4:**

**DATE:**

TECHNICAL ASSISTANCE:

---

---

---

---

---

---

TYPE OF INTERVENTION:

---

---

---

---

**Depureco Industrial Vacuums Srl**

Company under the direction and coordination of COFISE S.p.A.

Via Venezia, 32 - 10088 Volpiano (TO), Italy  
**Tel.** +39 011 98.59.117  
**Fax** +39 011 98.59.326

**www.depureco.com**  
depureco@depureco.com  
depureco@documentipec.com

**tax code- and VAT reg no.** 02258610357 - **Share capital:** € 25,000 fully paid up  
Turin Company Register - **R.E.A.** TO-1149668  
Registered in the **WEEE** register with no. IT18090000010711

